Atlas Scientific™
Environmental Robotics

V 5.0

Revised 10/21


EZO-ORP™

Embedded ORP Circuit

ISO 11271 Compliant

(determination of redox potential)

Reads	**ORP**
Range	**-1019.9mV – 1019.9mV**
Accuracy	**+/– 1mV**
Response time	**1 reading per sec**
Supported probes	**Any type & brand**
Calibration	**Single point**
Temp compensation	**N/A**
Data protocol	**UART & I²C**
Default I²C address	**98 (0x62)**
Operating voltage	**3.3V – 5V**
Data format	**ASCII**

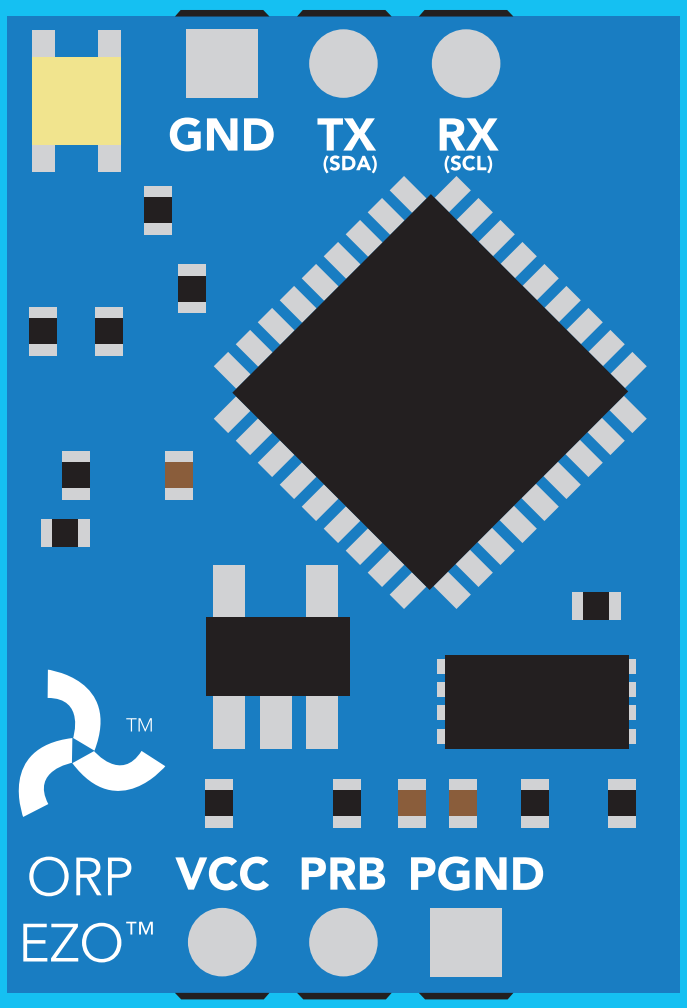

RoHS COMPLIANT

PATENT PROTECTED

Written by Jordan Press
Designed by Noah Press

This is an evolving document, check back for updates.




STOP

SOLDERING THIS DEVICE VOIDS YOUR WARRANTY.


This is sensitive electronic equipment. Get this device working in a solderless breadboard first. Once this device has been soldered it is no longer covered by our warranty.

This device has been designed to be soldered and can be soldered at any time. Once that decision has been made, Atlas Scientific no longer assumes responsibility for the device's continued operation. The embedded systems engineer is now the responsible party.

Get this device working in a solderless breadboard first!

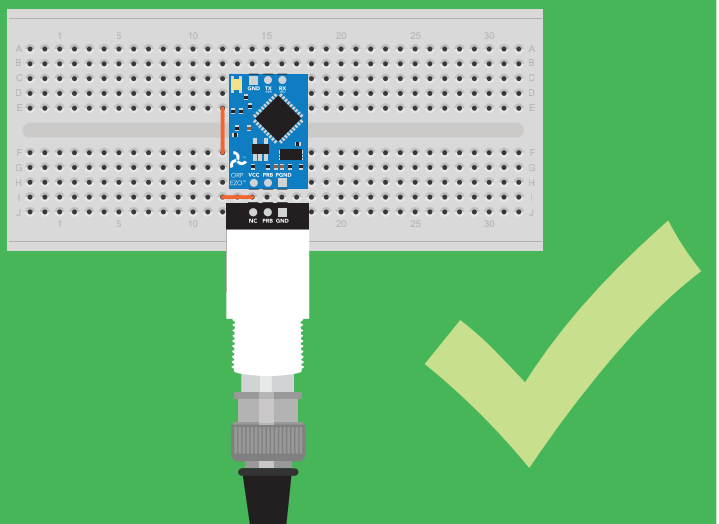

Do not embed this device without testing it in a solderless breadboard!

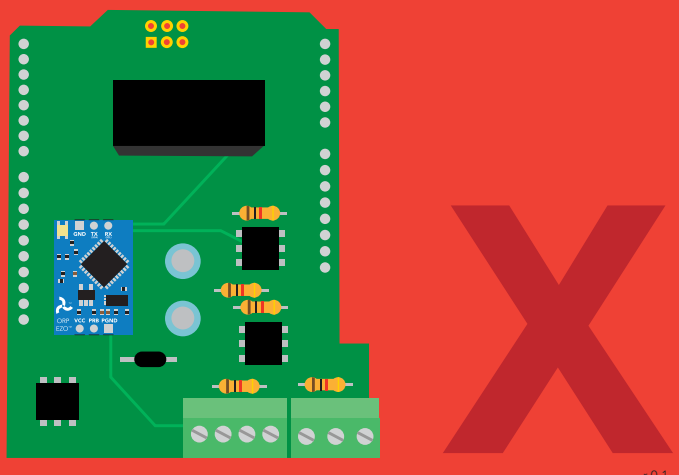

r 0.1

Table of contents

Circuit dimensions 4
Power consumption 4
Absolute max ratings 4
Operating principle 5
Power and data isolation 7
Correct wiring 9
Calibration theory 12
Default state 14
Available data protocols 15

UART

UART mode 17
Receiving data from device 18
Sending commands to device 19
LED color definition 20
UART quick command page 21
LED control 22
Find 23
Continuous reading mode 24
Single reading mode 25
Calibration 26
Export calibration 27
Import calibration 28
Naming device 29
Device information 30
Response codes 31
Reading device status 32
Sleep mode/low power 33
Change baud rate 34
Protocol lock 35
Factory reset 36
Change to I²C mode 37
Manual switching to I²C 38


I²C

I²C mode 40
Sending commands 41
Requesting data 42
Response codes 43
LED color definition 44
I²C quick command page 45
LED control 46
Find 47
Taking reading 48
Calibration 49
Export calibration 50
Import calibration 51
Naming device 52
Device information 53
Reading device status 54
Sleep mode/low power 55
Protocol lock 56
I²C address change 57
Factory reset 58
Change to UART mode 59
Manual switching to UART 60

Circuit footprint 61
Datasheet change log 62
Warranty 65

Copyright © Atlas Scientific LLC

EZO™ circuit dimensions

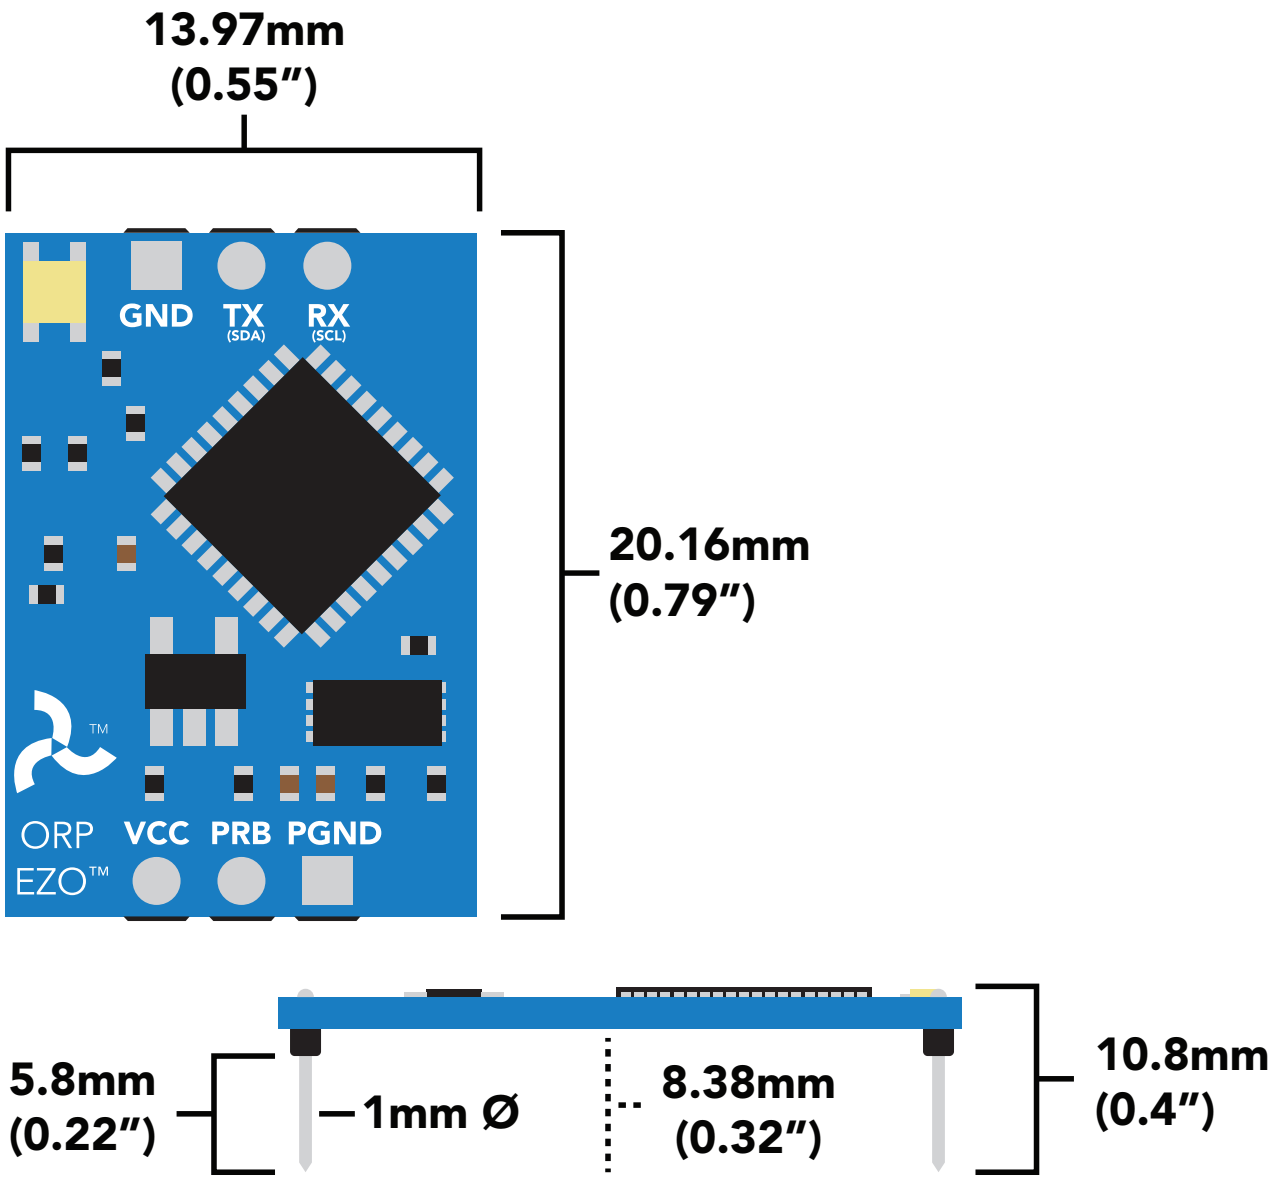

Power consumption

	LED	MAX	STANDBY	SLEEP
5V	ON	18.3 mA	16 mA	1.16 mA
	OFF	13.8 mA	13.8 mA	
3.3V	ON	14.5 mA	13.9 mA	0.995 mA
	OFF	13.3 mA	13.3 mA	

Absolute max ratings


Parameter	MIN	TYP	MAX
Storage temperature (EZO™ ORP)	-65 °C		125 °C
Operational temperature (EZO™ ORP)	-40 °C	25 °C	85 °C
VCC	3.3V	5V	5.5V

Copyright © Atlas Scientific LLC

Operating principle

ORP stands for ***oxidation/reduction potential***. Oxidation is the loss of electrons and reduction is the gain of electrons. The output of the probe is represented in millivolts and can be positive or negative.

Just like a pH probe measures hydrogen ion activity in a liquid; an ORP probe measures electron activity in a liquid. The ORP readings represents how strongly electrons are transferred to or from substances in a liquid. Keeping in mind that the readings do not indicate the amount of electrons available for transfer.

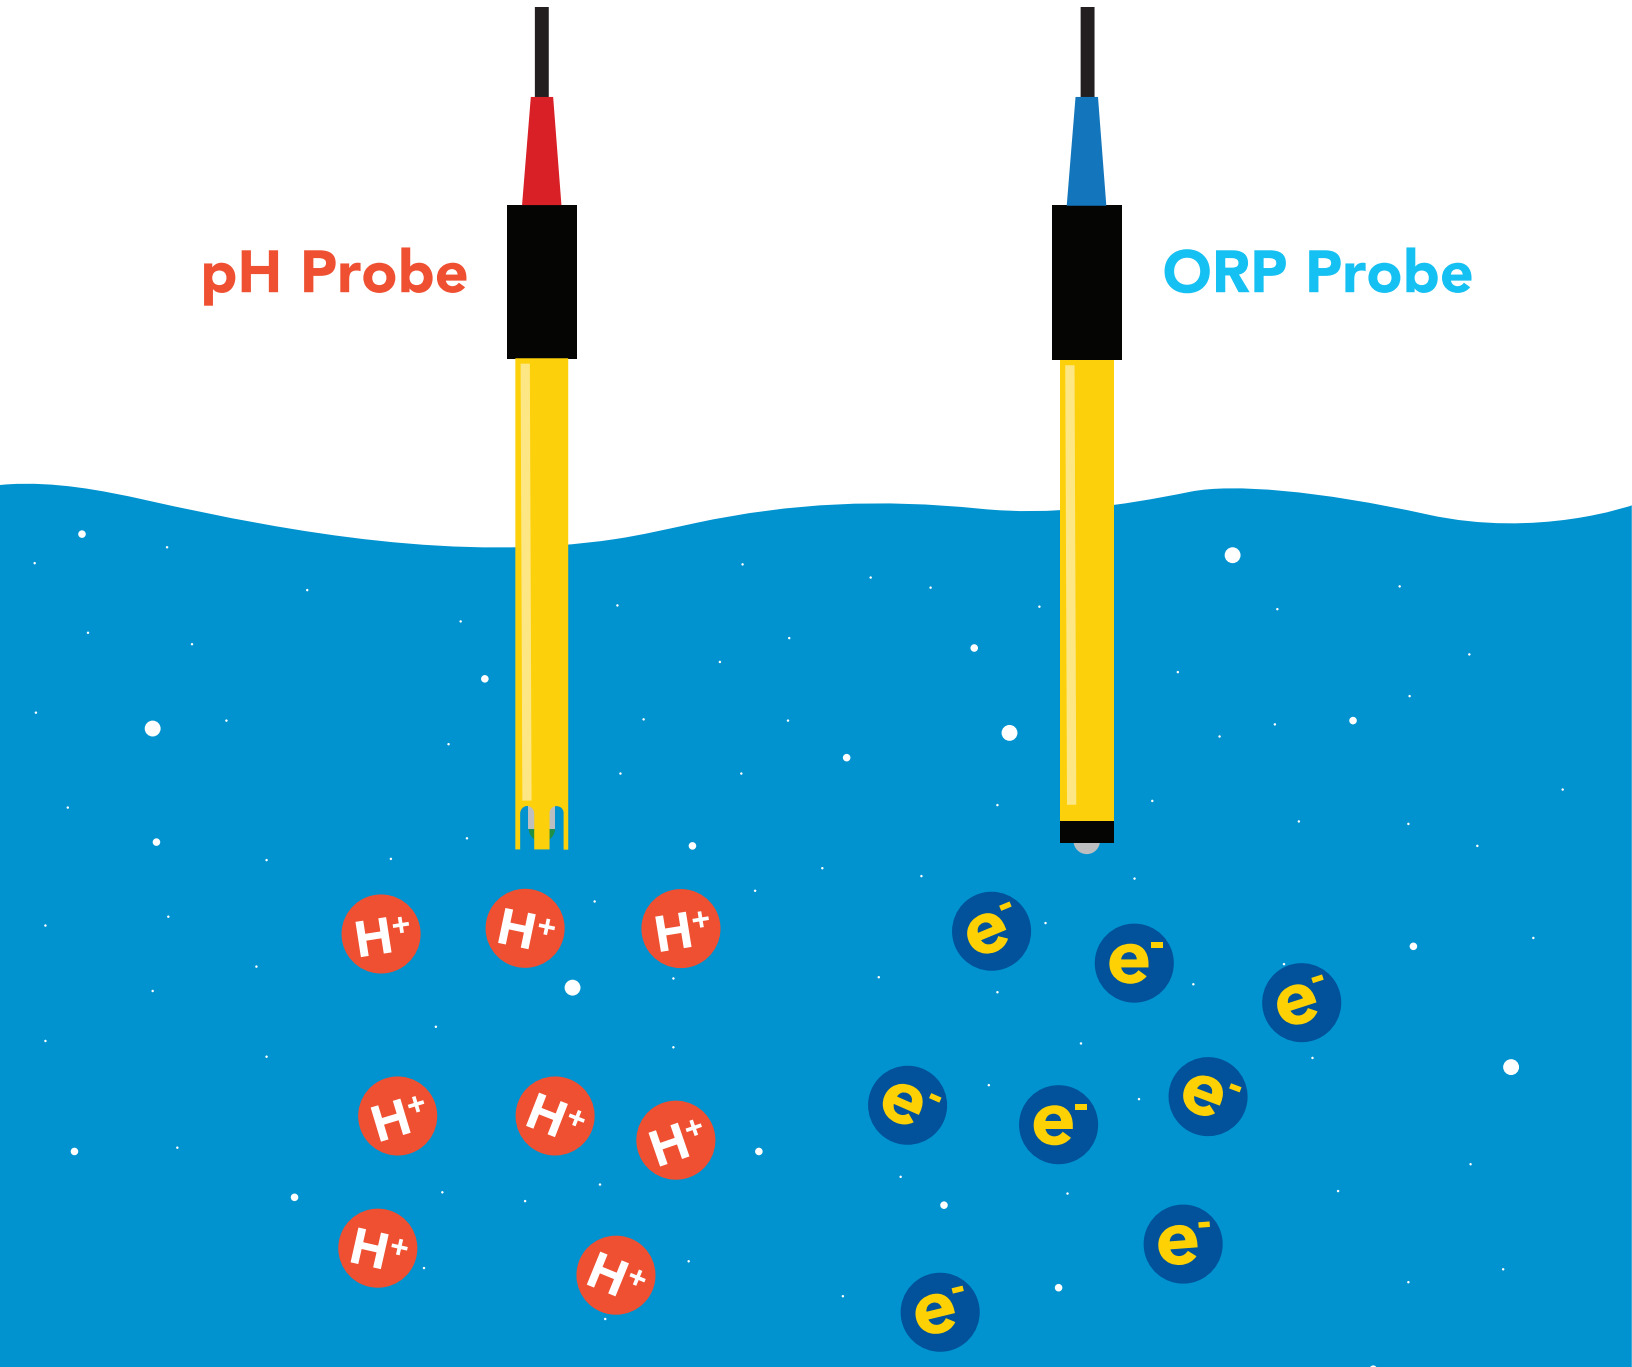


Copyright © Atlas Scientific LLC

When reading the ORP of a liquid that has very few electrons available for transfer ORP readings can appear to be inconsistent.

The water is unreactive and has only trace amounts of electron movement. *These readings are equivalent to the readings you see with an unconnected multimeter.*

-234.6
Reading A

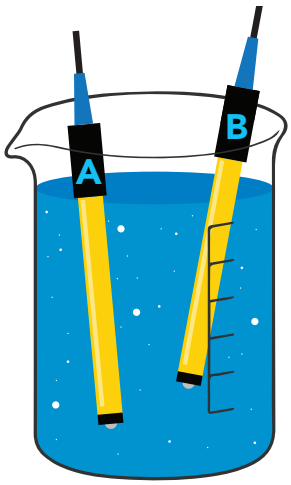

24.2
Reading B

Tap water

606.9
Reading A




605.3
Reading B

Tap water

Add just a drop of bleach
(which is an oxidizing agent)

An ORP probe has a platinum tip that is connected to a silver wire, surrounded by silver chloride. That silver wire is then connected to a KCL reference solution. Because platinum is an unreactive metal it can "silently observe" the electron activity of the liquid without becoming apart of whatever reaction is occurring in the liquid.

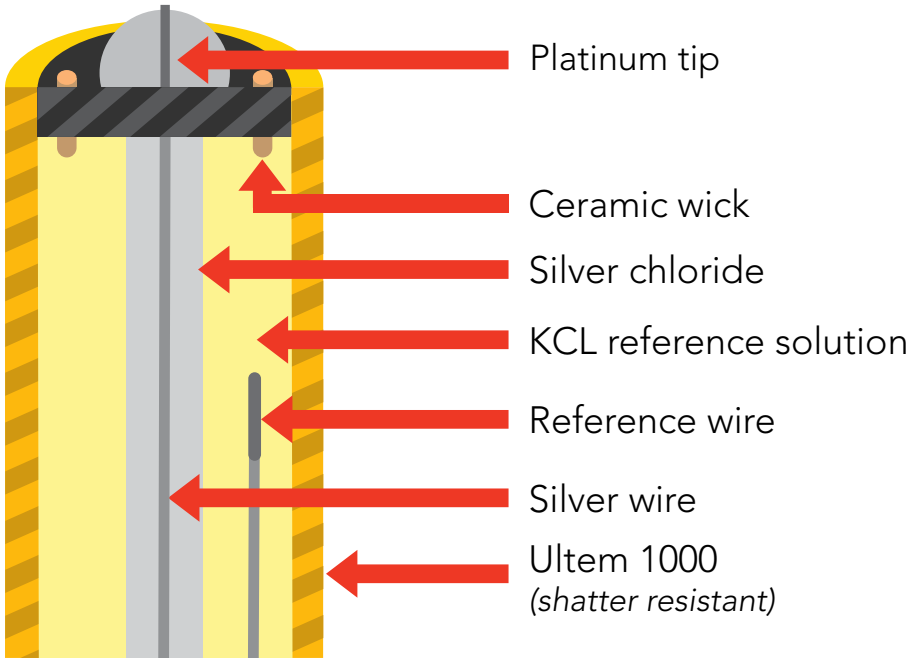


Copyright © Atlas Scientific LLC

Power and data isolation


The Atlas Scientific EZO™ ORP circuit is a very sensitive device. This sensitivity is what gives the ORP circuit its accuracy. This also means that the ORP circuit is capable of reading micro-voltages that are bleeding into the water from unnatural sources such as pumps, solenoid valves or other probes/sensors.

When electrical noise is interfering with the ORP readings it is common to see rapidly fluctuating readings or readings that are consistently off. To verify that electrical noise is causing inaccurate readings, place the ORP probe in a cup of water by itself. The readings should stabilize quickly, confirming that electrical noise was the issue.

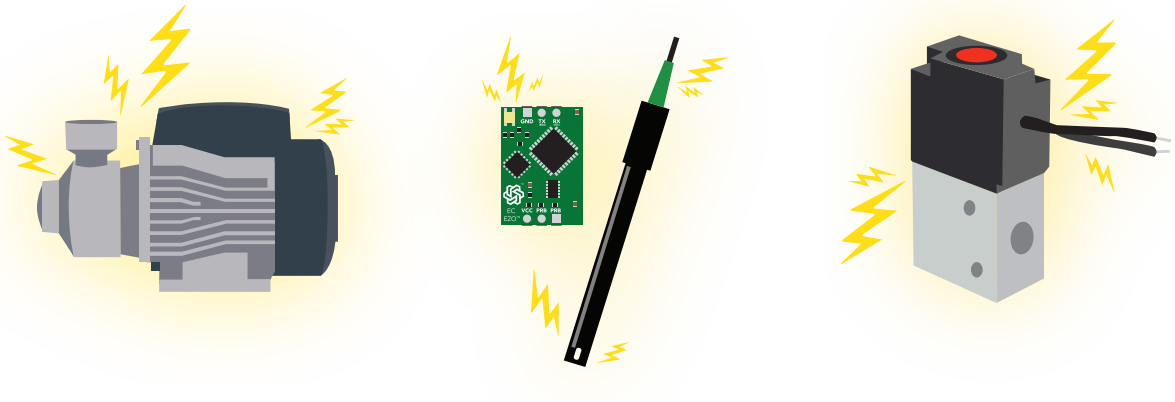

When reading ORP and Conductivity or Dissolved Oxygen together, it is ***strongly recommended*** that the EZO™ ORP circuit is electrically isolated from the EZO™ Conductivity or Dissolved Oxygen circuit.

Basic EZO™ Inline Voltage Isolator

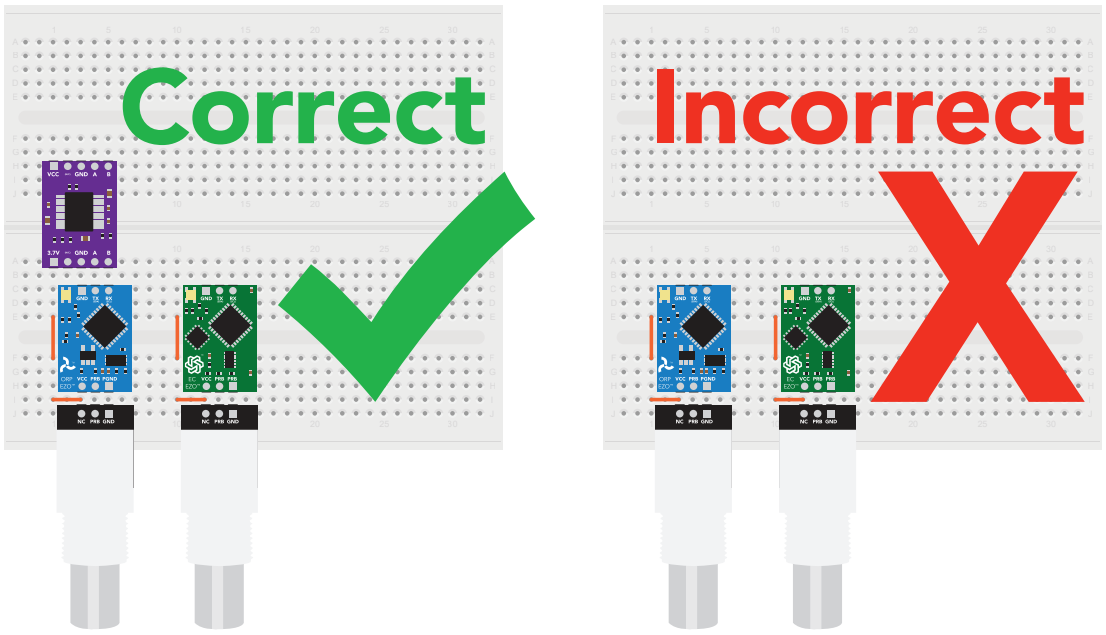


Without isolation, Conductivity and Dissolved Oxygen readings will effect ORP accuracy.

Copyright © Atlas Scientific LLC

This schematic shows exactly how we isolate data and power using the and a few passive components. The ADM3260 can output isolated power up to 150 mW and incorporates two bidirectional data channels.

This technology works by using tiny transformers to induce the voltage across an air gap. PCB layout requires special attention for EMI/EMC and RF Control, having proper ground planes and keeping the capacitors as close to the chip as possible are crucial for proper performance. The two data channels have a 4.7kΩ pull up resistor on both the isolated and non-isolated lines (R1, R2, R3, and R4) The output voltage is set using a voltage divider (R6 and R7) this produces a voltage of 3.9V regardless of your input voltage.

Isolated ground is different from non-isolated ground, these two lines should not be connected together.

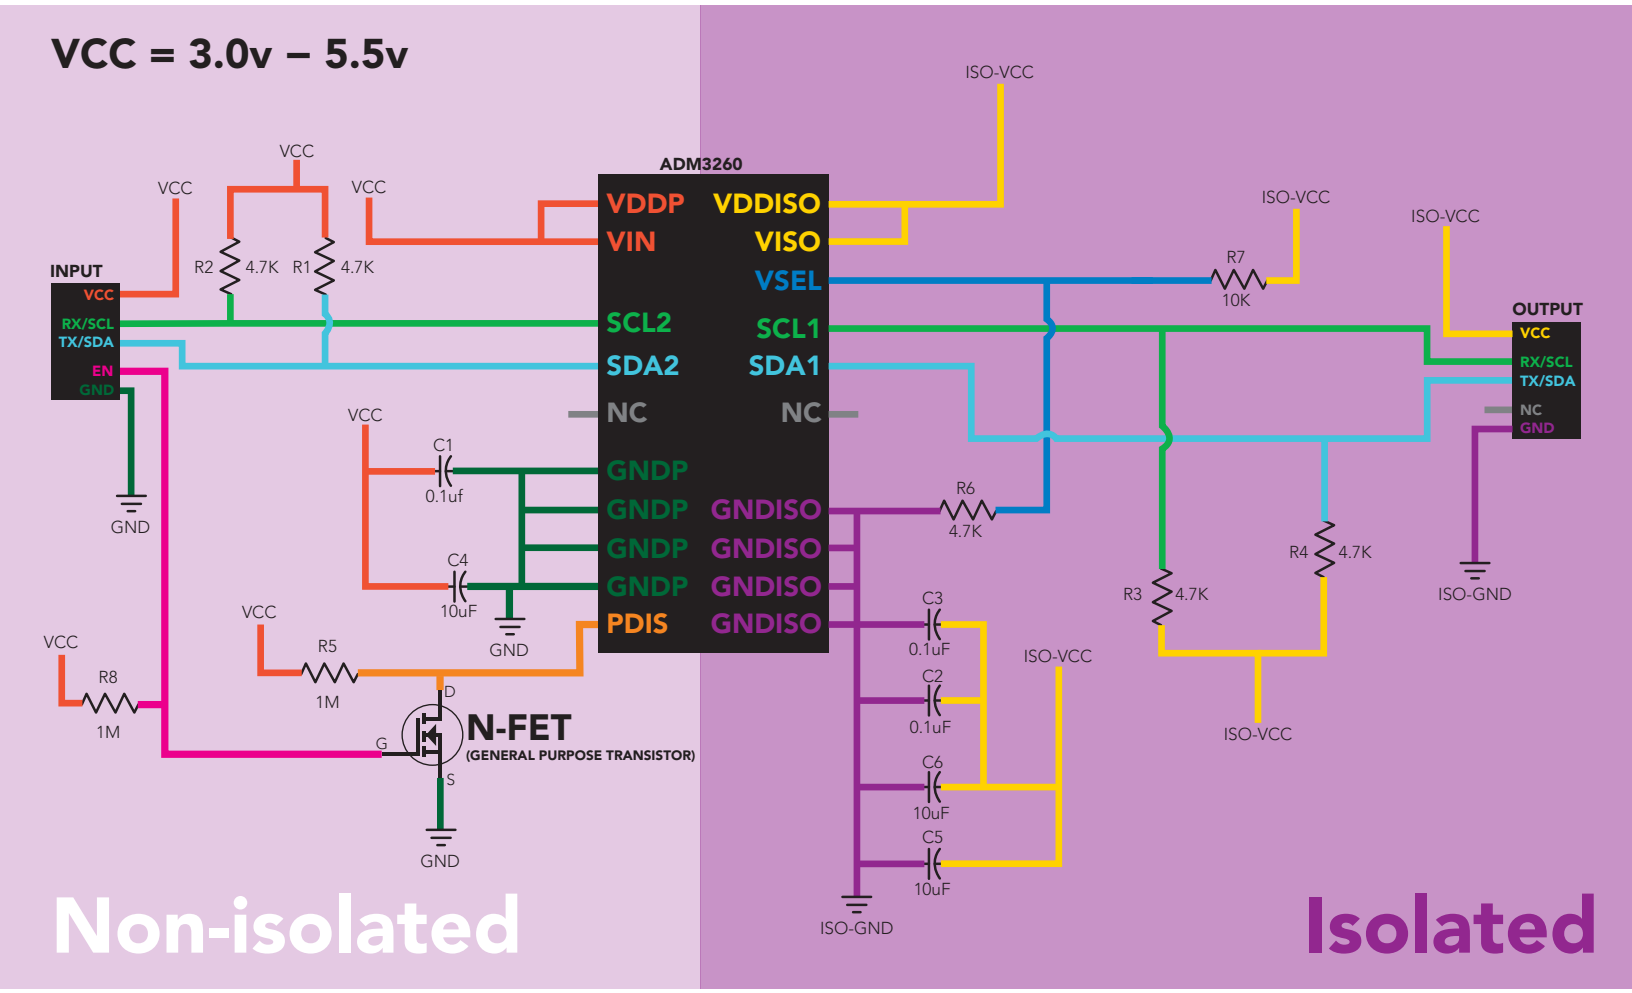


Copyright © Atlas Scientific LLC

Correct wiring


Carrier board

USB carrier board


Bread board

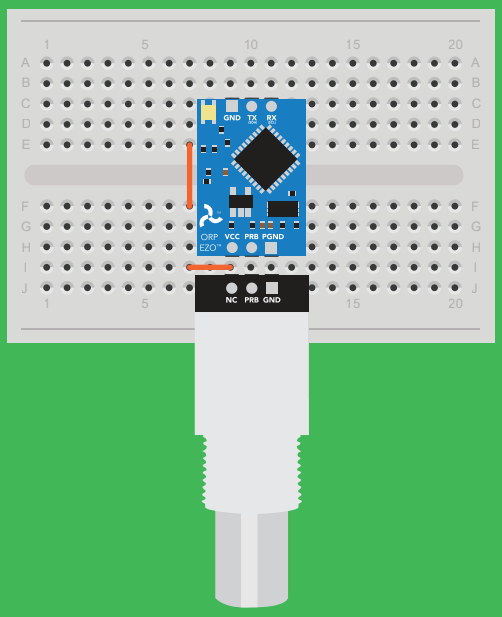


Bread board via USB

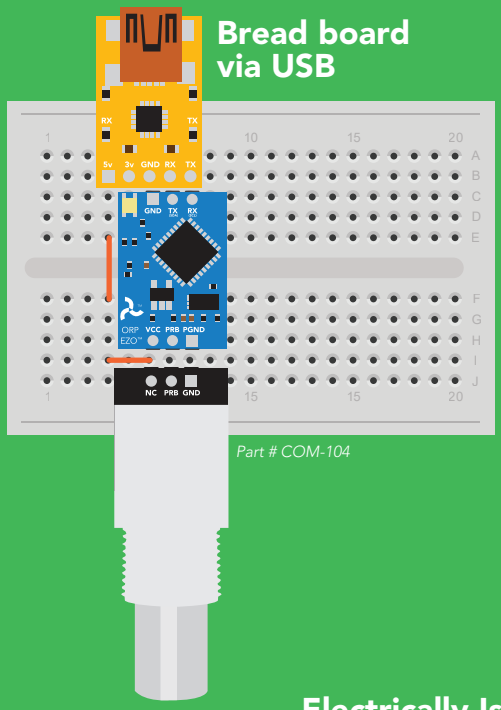

Part # COM-104

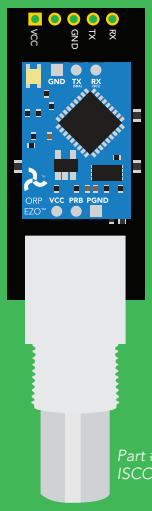


Part # ISCCB

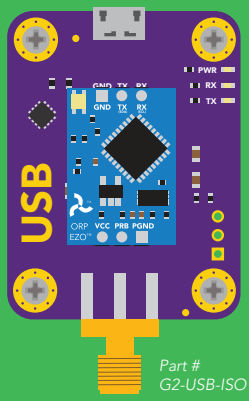

Part # G2-USB-ISO


Electrically Isolated EZO™ Carrier Board

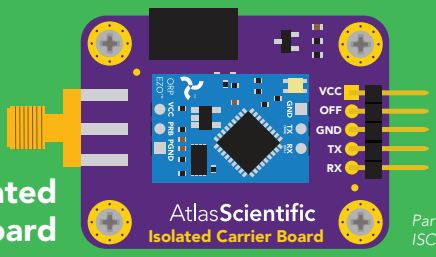


Part # ISCCB-2

Incorrect wiring


Extended leads

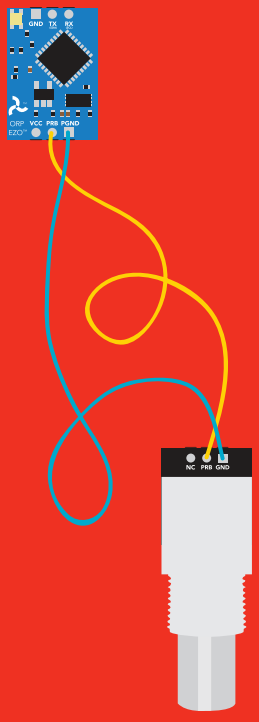


Sloppy setup

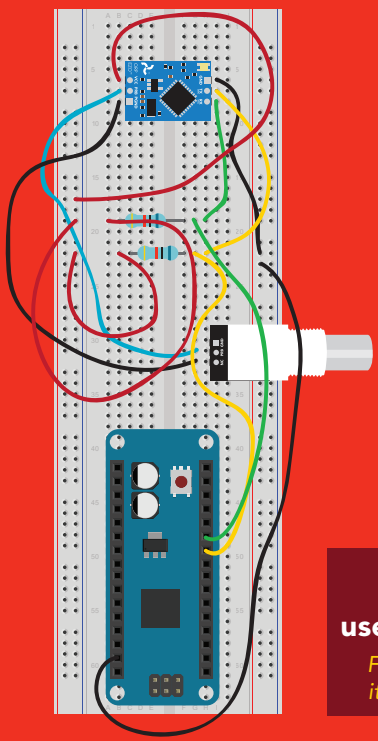

Perfboards or Protoboards

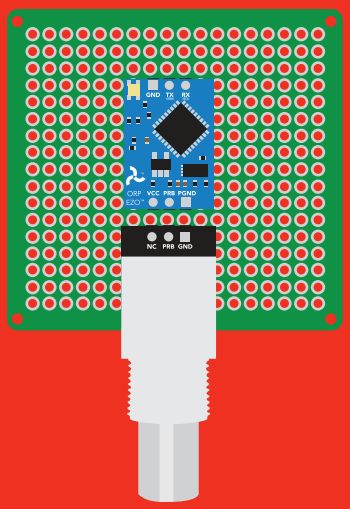

*Embedded into your device

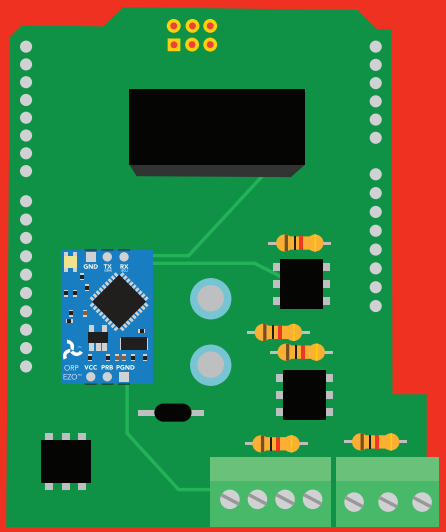


NEVER
use Perfboards or Protoboards
Flux residue and shorting wires make it very hard to get accurate readings.

***Only after you are familar with EZO™ circuits operation**

Copyright © Atlas Scientific LLC

AtlasScientific™
Environmental Robotics
r 0.1

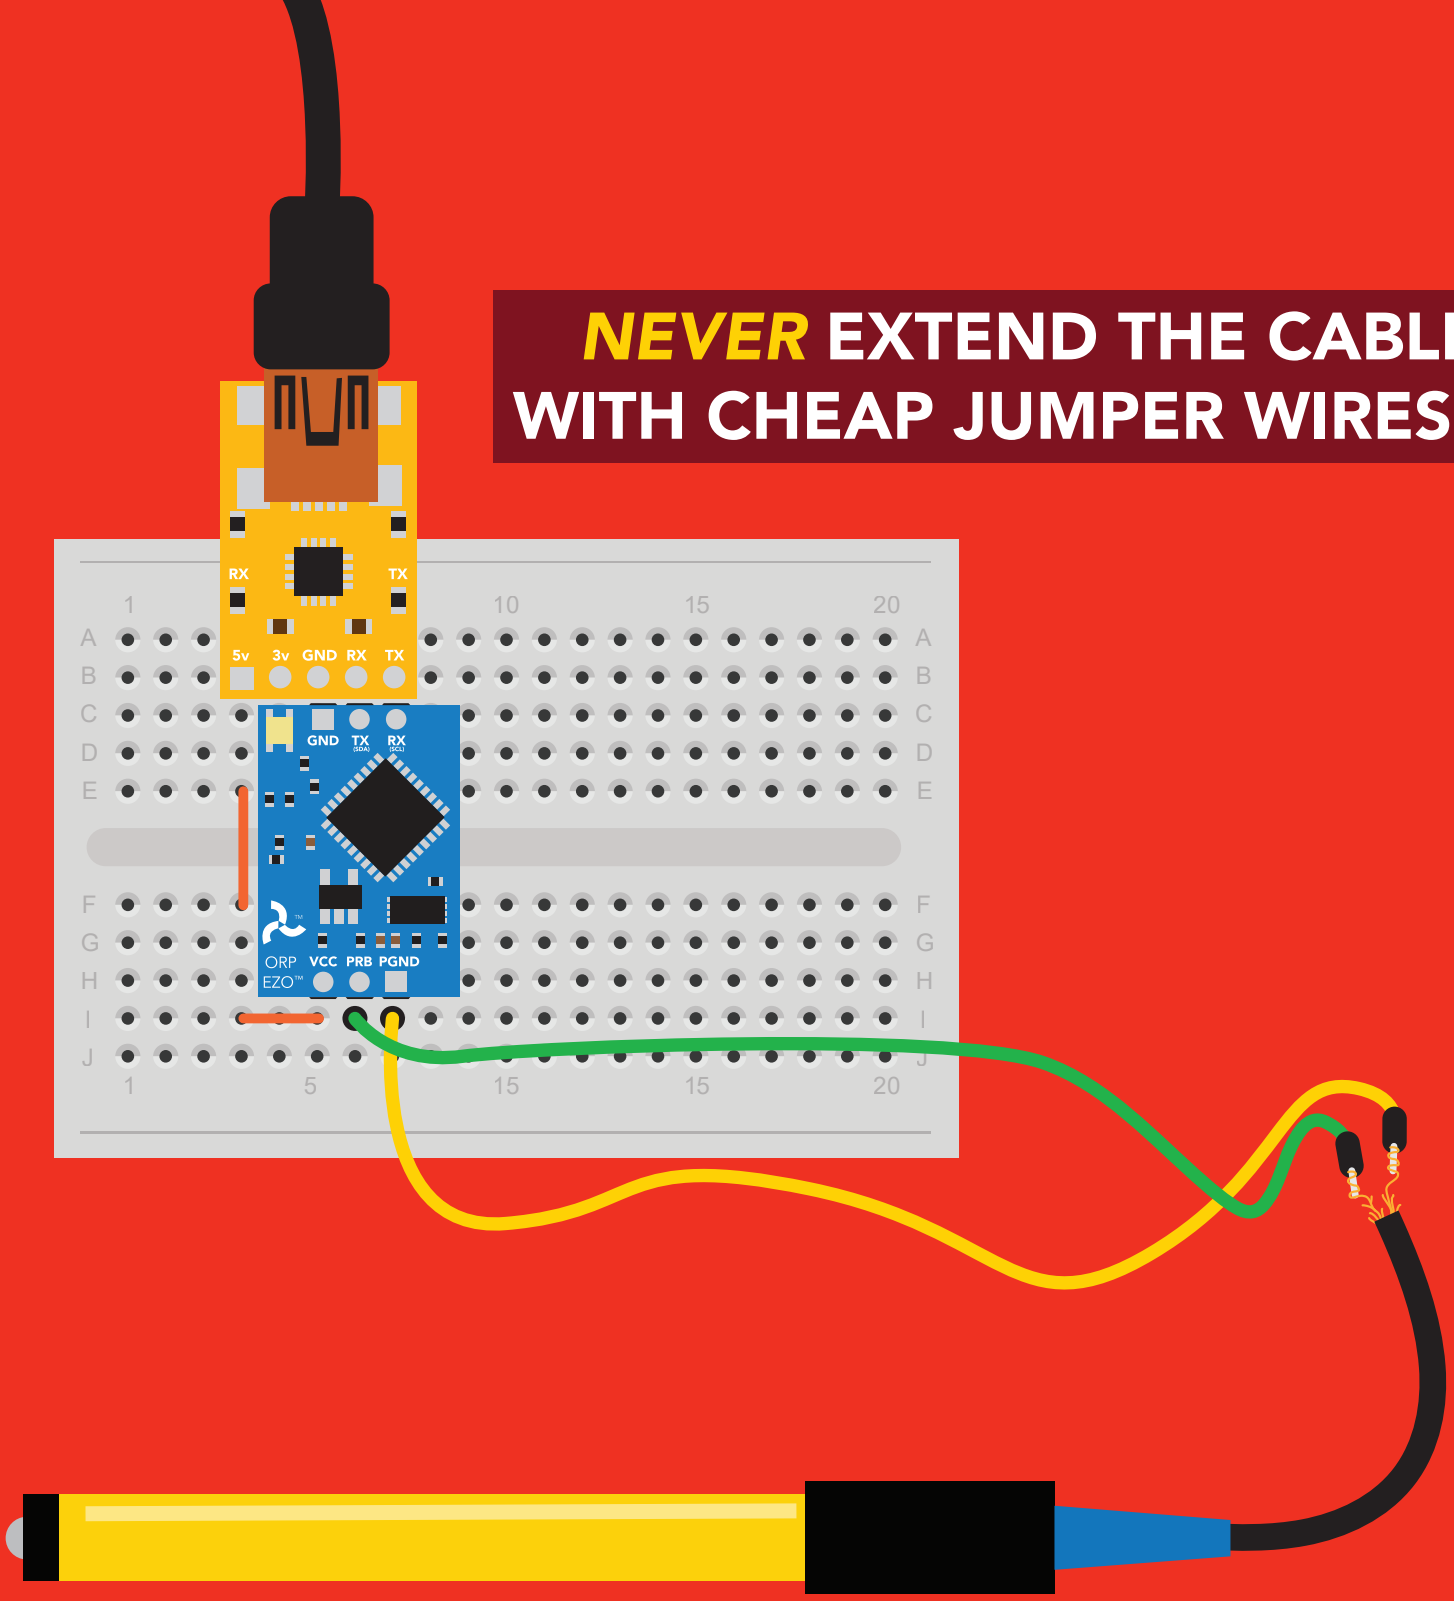


NEVER EXTEND THE CABLE WITH CHEAP JUMPER WIRES!

DO NOT CUT THE PROBE CABLE WITHOUT REFERING TO *THIS DOCUMENT!*

Copyright © Atlas Scientific LLC

AtlasScientific™
Environmental Robotics

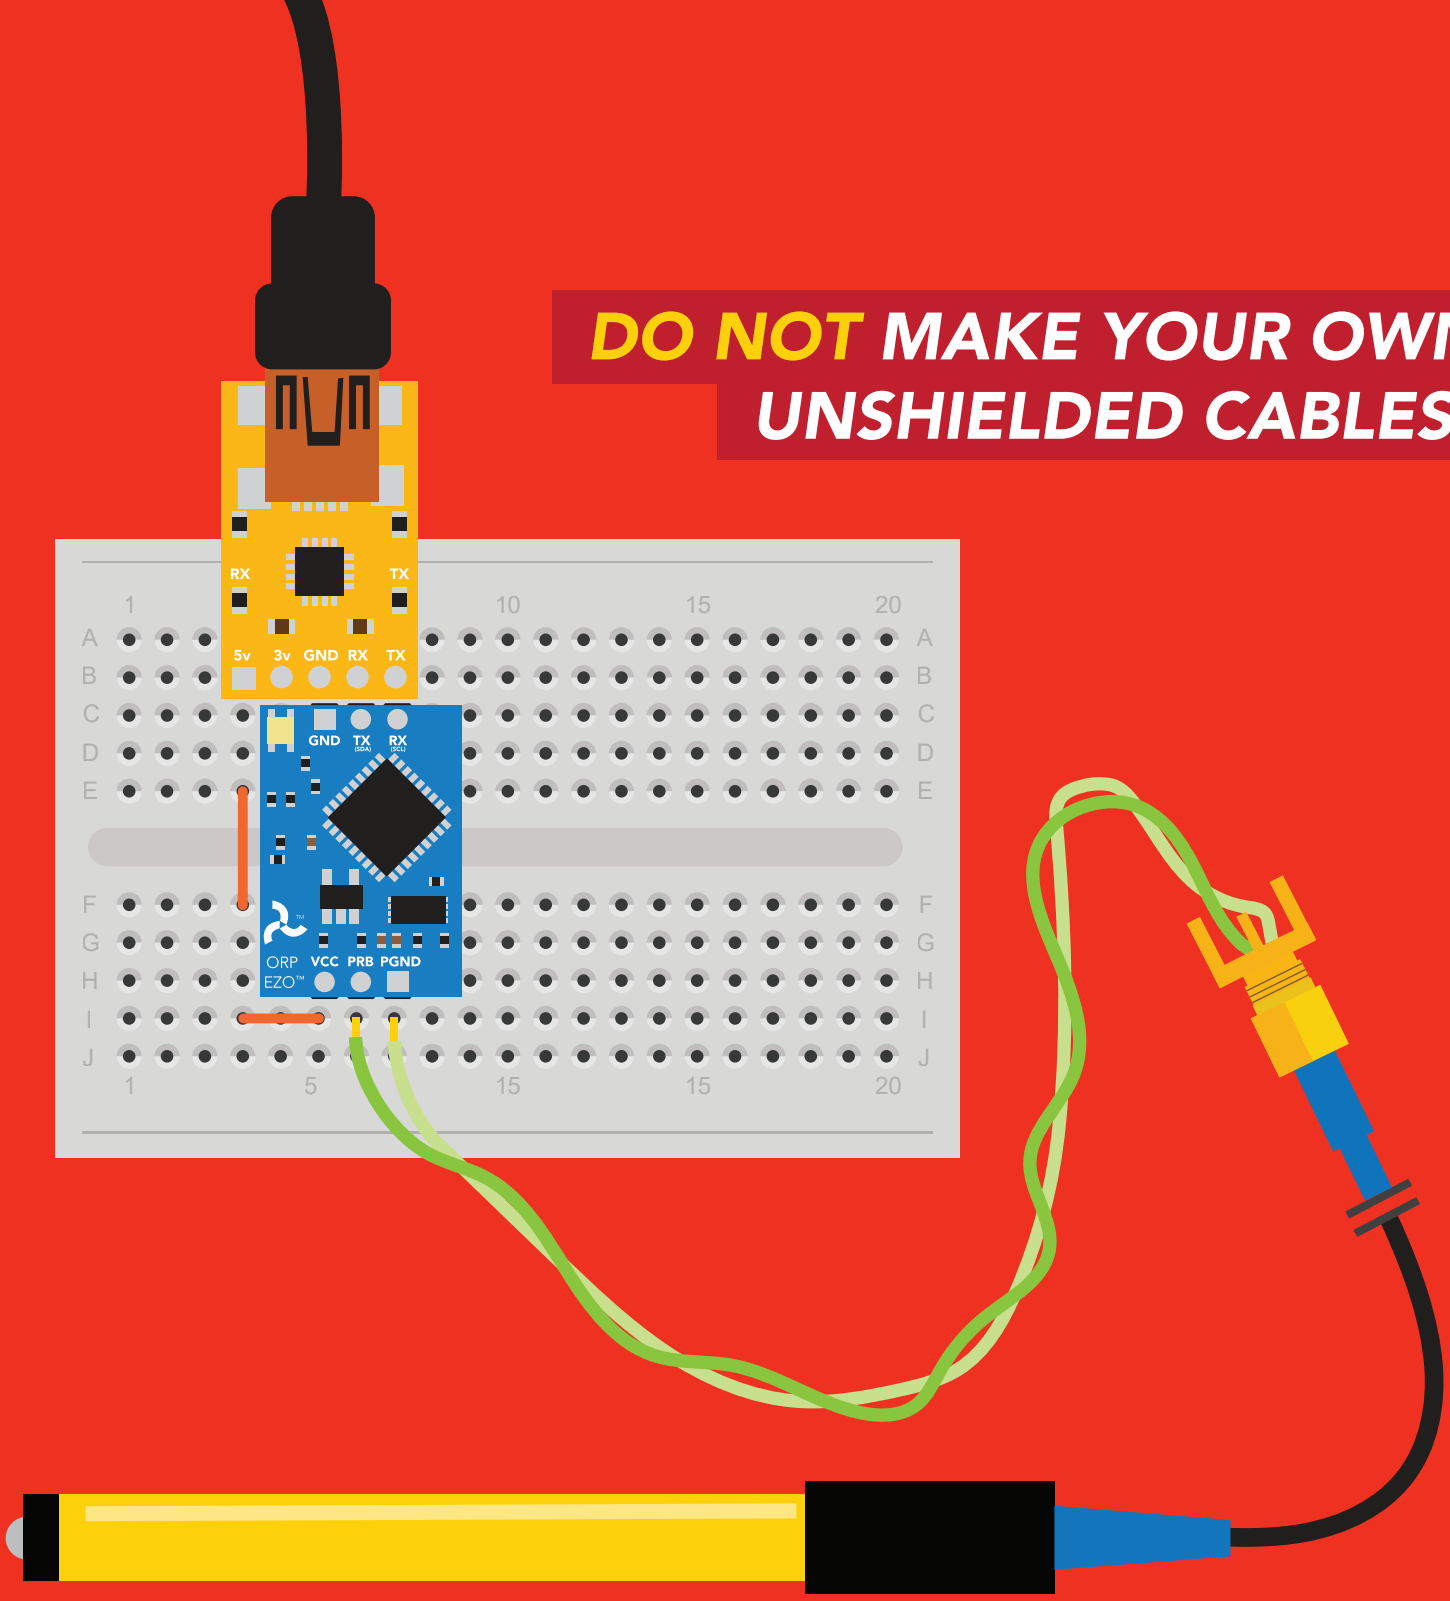

DO NOT MAKE YOUR OWN UNSHIELDED CABLES!

ONLY USE SHIELDED CABLES.
REFER TO THIS DOCUMENT!

Copyright © Atlas Scientific LLC

AtlasScientific™
Environmental Robotics

Calibration theory

Simple calibration


UART mode

Continuous readings

Advanced calibration

I²C mode

Continuously request readings

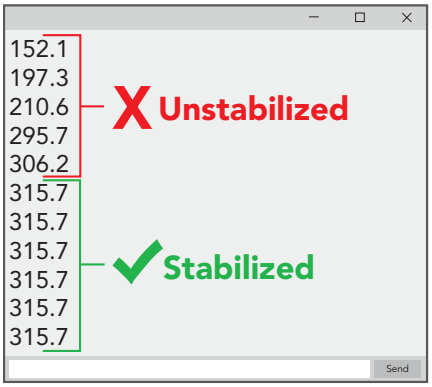

The most important part of calibration is watching the readings during the calibration process.

It's easiest to calibrate the device in its default state (UART mode, with continuous readings enabled).

Switching the device to I²C mode after calibration ***will not*** affect the stored calibration. If the device must be calibrated in I²C mode be sure to ***continuously request readings*** so you can see the output from the probe.



The Atlas Scientific EZO™ ORP circuit has a flexible calibration protocol, allowing single point calibration to ***any off the shelf calibration solution.***


However, If this is your first time calibrating the EZO™ ORP circuit, Atlas Scientific recommends using the 225mv calibration solution.




 Copyright © Atlas Scientific LLC

Single point calibration


Remove the soaker bottle and rinse off the ORP probe. Remove the top of the **ORP 225mV** calibration solution pouch. Insert the ORP probe directly into the pouch, and let the probe sit in the calibration solution until the readings stabilize *(small movement from one reading to the next is normal)*.

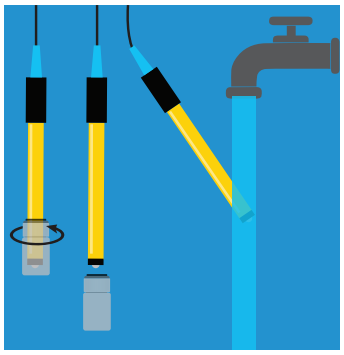

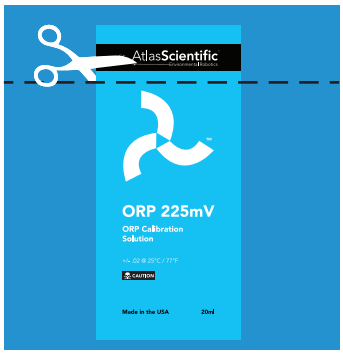





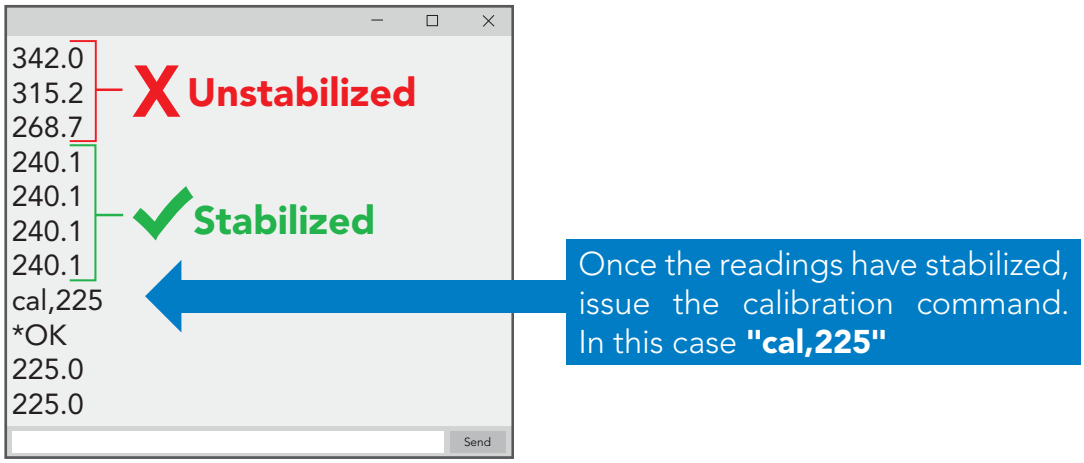

Calibration should be done at least once per year


If the ORP that's being read is continuously on the extremes of the scale *(~ -900mV or +900mV)* calibration may have to be done more often. The exact frequency of calibration will have to be determined by your engineering team.

Copyright © Atlas Scientific LLC

Default state

UART mode

Baud	**9,600**
Readings	**continuous**
Speed	**1 reading per second**
LED	**on**

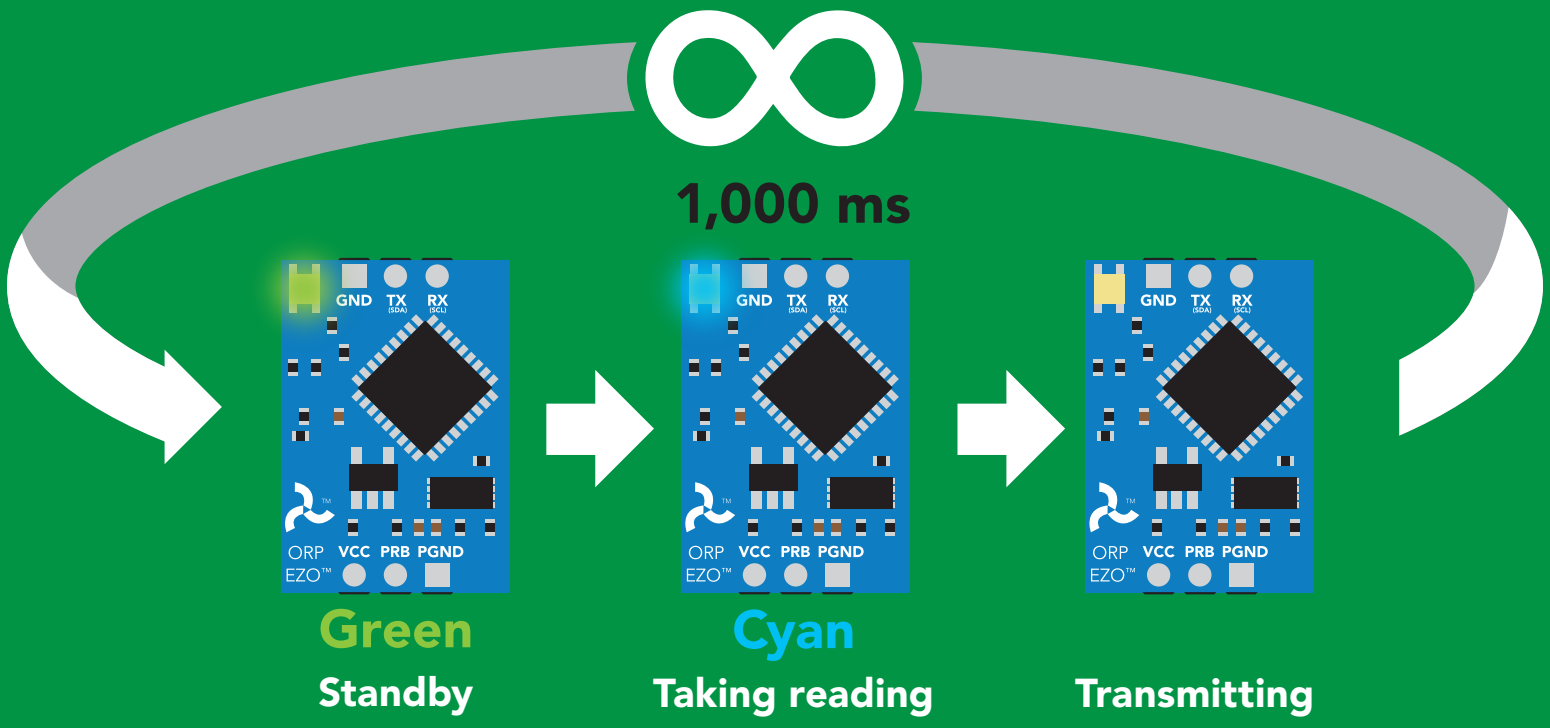

Copyright © Atlas Scientific LLC

AtlasScientific™
Environmental Robotics

✓ Available data protocols

UART

Default

I²C

X Unavailable data protocols

SPI

Analog

RS-485

Mod Bus

4–20mA

Copyright © Atlas Scientific LLC

AtlasScientific™
Environmental Robotics
r 0.1

UART mode

Settings that are retained if power is cut

Baud rate
Calibration
Continuous mode
Device name
Enable/disable response codes
Hardware switch to I^2C mode
LED control
Protocol lock
Software switch to I^2C mode

Settings that are *NOT* retained if power is cut

Find
Sleep mode

UART mode

8 data bits	no parity
1 stop bit	no flow control

Baud

300
1,200
2,400
9,600 default
19,200
38,400
57,600
115,200

RX
Data in




TX
Data out



Vcc 3.3V – 5.5V



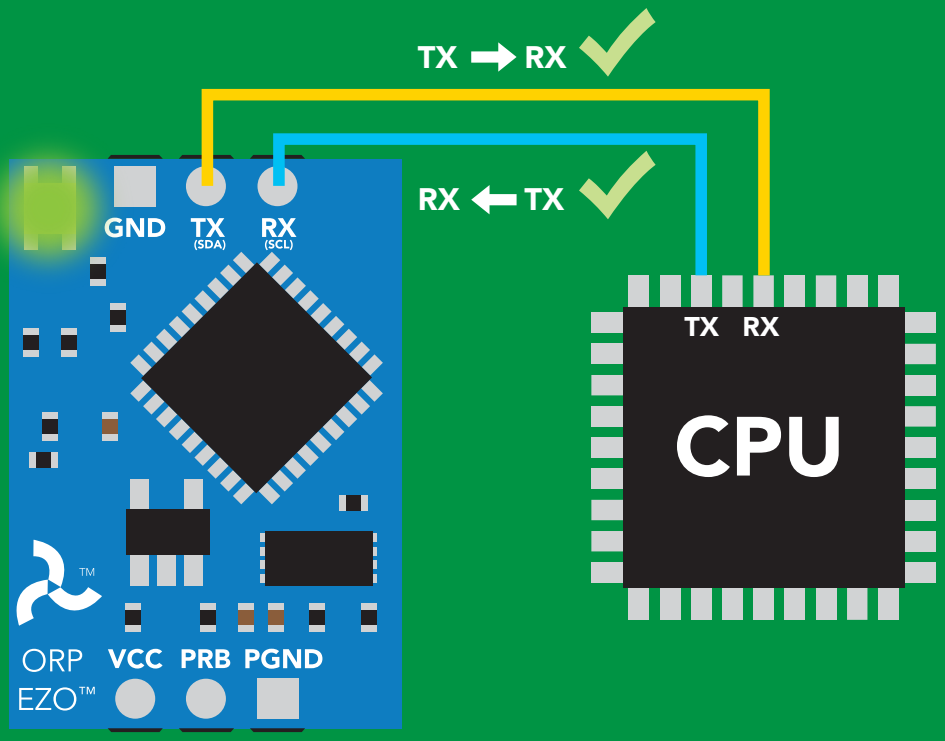

Data format

Reading	**ORP**	**Data type**	**floating point**
Units	**mV**	**Decimal places**	**1**
Encoding	**ASCII**	**Smallest string**	**2 characters**
Format	**string**	**Largest string**	**40 characters**
Terminator	**carriage return**		


Copyright © Atlas Scientific LLC

Receiving data from device

2 parts

ASCII data string
Command

Carriage return <cr>
Terminator

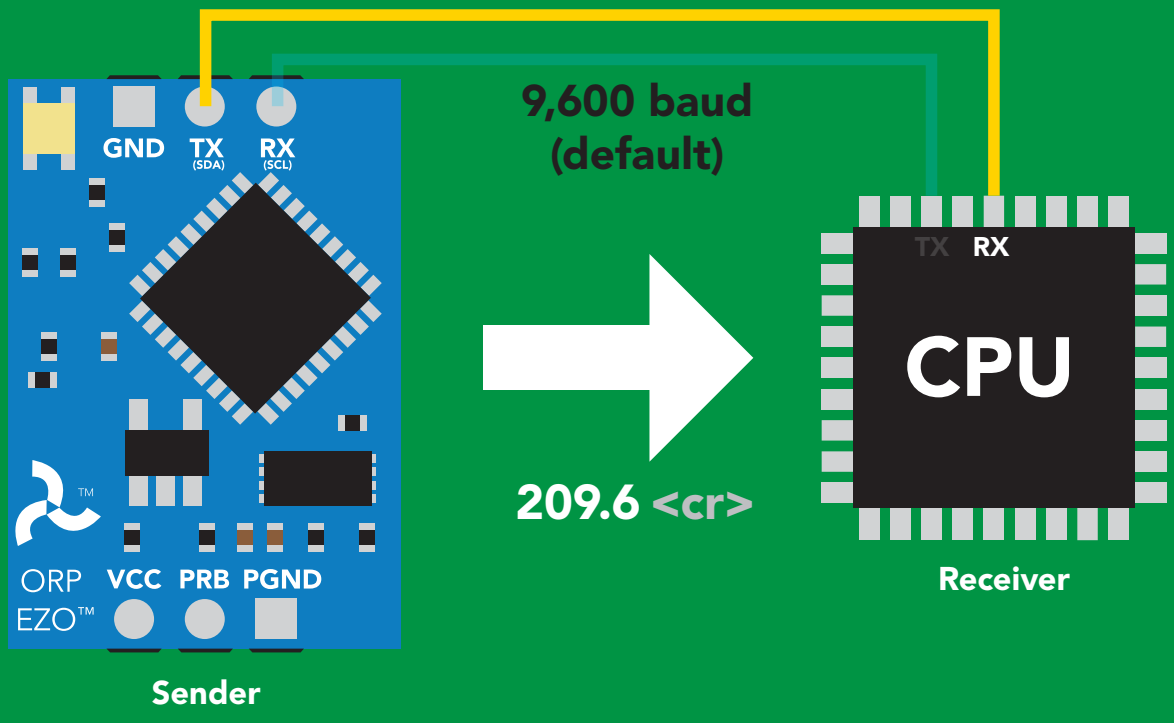

Advanced

ASCII:	2	0	9	.	6	<cr>
Hex:	32	30	39	2E	36	0D
Dec:	50	48	57	46	54	13

Copyright © Atlas Scientific LLC

Sending commands to device


2 parts

Command (not case sensitive)

ASCII data string

Carriage return <cr>

Terminator

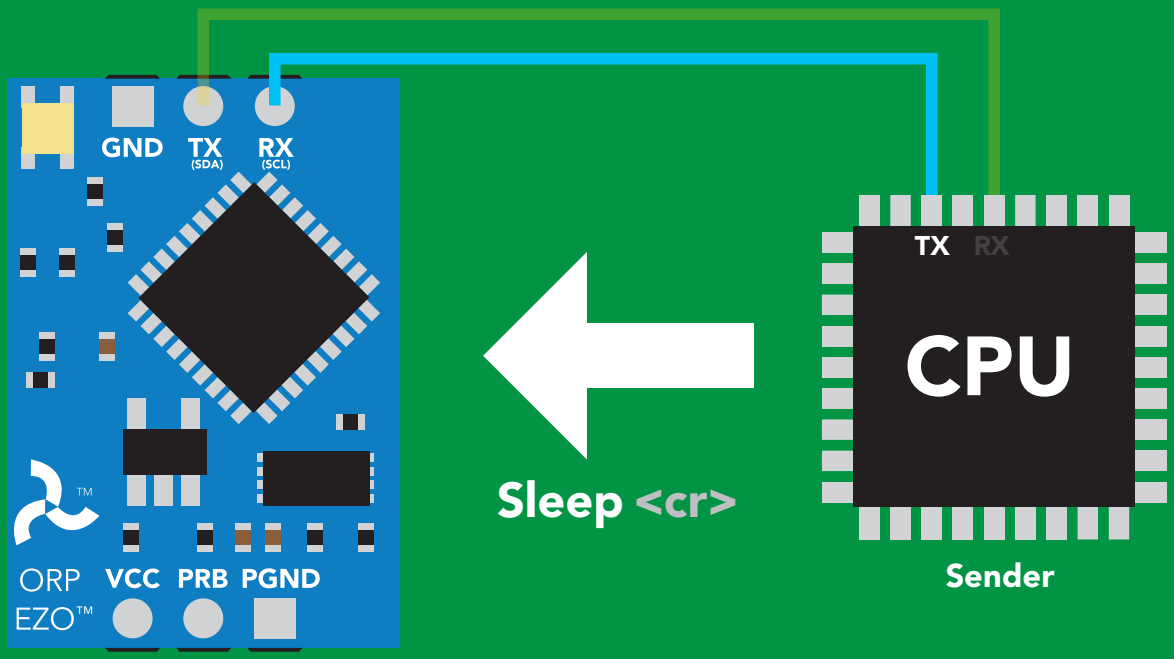

Advanced


ASCII:	S	l	e	e	p	<cr>
Hex:	53	6C	65	65	70	0D
Dec:	83	108	101	101	112	13

Copyright © Atlas Scientific LLC

Atlas Scientific™ Environmental Robotics


r 0.1

LED color definition

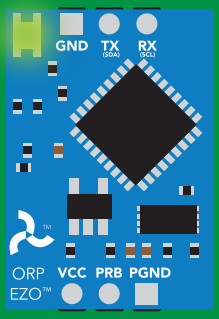


Green

UART standby

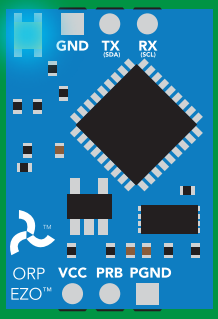


Cyan

Taking reading

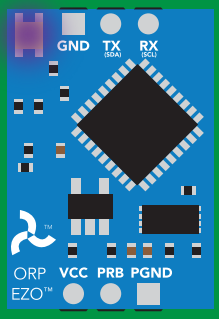


Purple

Changing baud rate

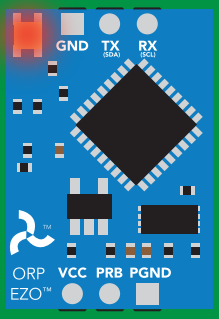

Red

Command not understood

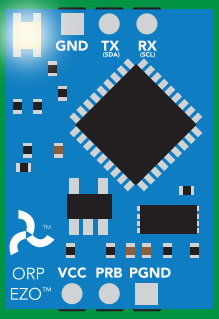

White

Find

	LED ON
5V	**+2.2 mA**
3.3V	**+0.6 mA**

Copyright © Atlas Scientific LLC

UART mode
command quick reference

All commands are ASCII strings or single ASCII characters.

Command	Function		Default state
Baud	change baud rate	pg. 34	9,600
C	enable/disable continuous reading	pg. 24	enabled
Cal	performs calibration	pg. 26	n/a
Export	export calibration	pg. 27	n/a
Factory	enable factory reset	pg. 36	n/a
Find	finds device with blinking white LED	pg. 23	n/a
i	device information	pg. 30	n/a
I2C	change to I²C mode	pg. 37	not set
Import	import calibration	pg. 28	n/a
L	enable/disable LED	pg. 22	enabled
Name	set/show name of device	pg. 29	not set
Plock	enable/disable protocol lock	pg. 35	disabled
R	returns a single reading	pg. 25	n/a
Sleep	enter sleep mode/low power	pg. 33	n/a
Status	retrieve status information	pg. 32	n/a
*OK	enable/disable response codes	pg. 31	enable

Copyright © Atlas Scientific LLC

LED control


Command syntax

L,1 <cr> LED on **default**


L,0 <cr> LED off

L,? <cr> LED state on/off?

Example	Response
L,1 <cr>	*OK <cr>
L,0 <cr>	*OK <cr>
L,? <cr>	?L,1 <cr> or ?L,0 <cr> *OK <cr>

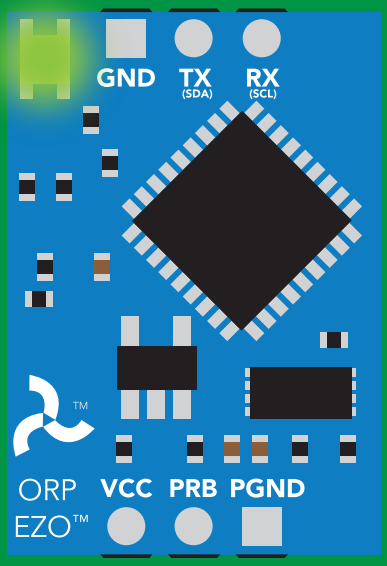

L,1

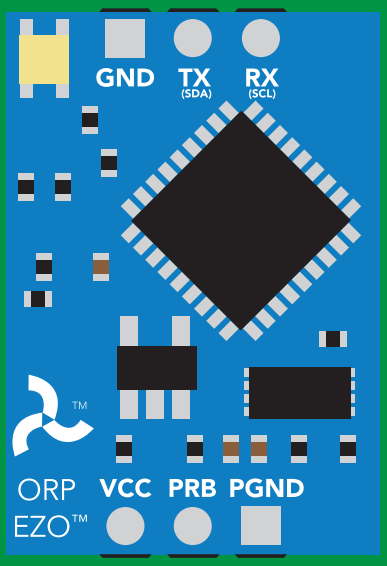

L,0

 Copyright © Atlas Scientific LLC


Find

Command syntax

This command will disable continuous mode
Send any character or command to terminate find.

Find <cr> **LED rapidly blinks white, used to help find device**

Example	Response
Find <cr>	***OK** <cr>

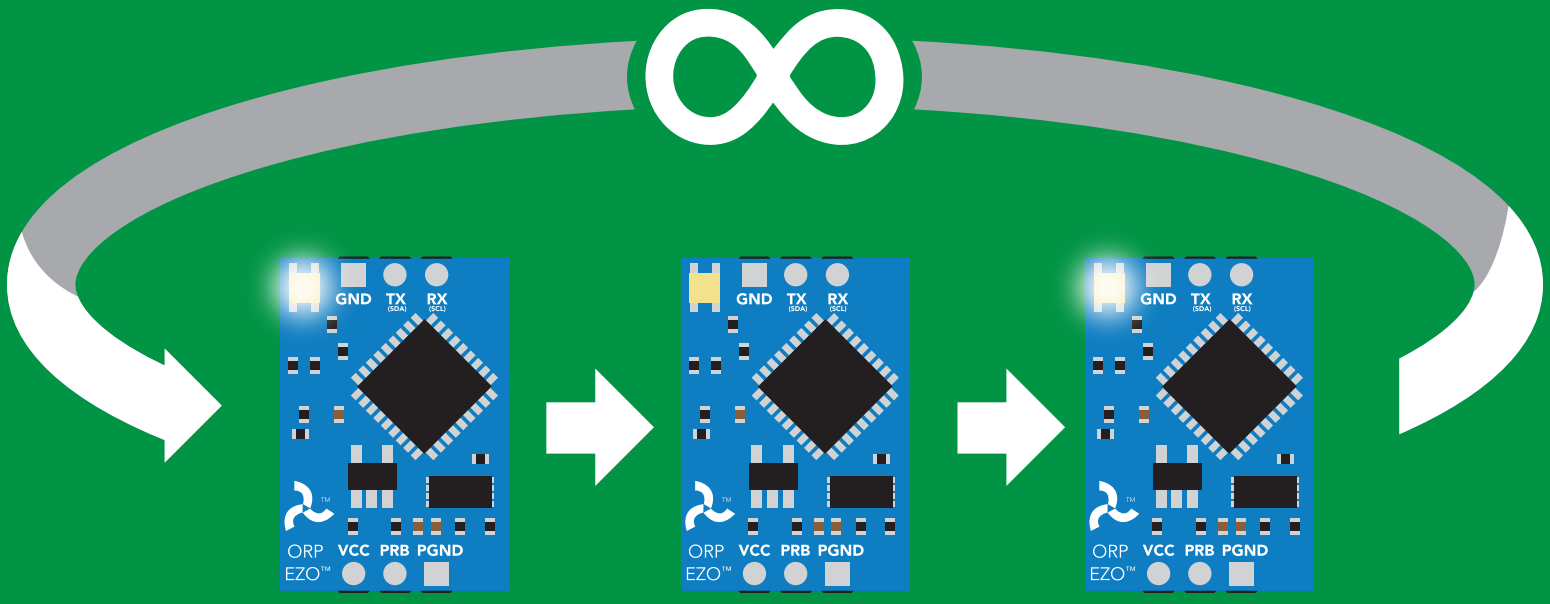

Copyright © Atlas Scientific LLC

AtlasScientific™
Environmental Robotics
r 0.1

Continuous reading mode

Command syntax

C,1 <cr>	enable continuous readings once per second	default
C,n <cr>	continuous readings every n seconds (n = 2 to 99 sec)	
C,0 <cr>	disable continuous readings	
C,? <cr>	continuous reading mode on/off?	

Example	Response
C,1 <cr>	*OK <cr> ORP (1 sec) <cr> ORP (2 sec) <cr> ORP (n sec) <cr>
C,30 <cr>	*OK <cr> ORP (30 sec) <cr> ORP (60 sec) <cr> ORP (90 sec) <cr>
C,0 <cr>	*OK <cr>
C,? <cr>	?C,1 <cr> or ?C,0 <cr> or ?C,30 <cr> *OK <cr>


Copyright © Atlas Scientific LLC

Single reading mode

Command syntax

R <cr> takes single reading

Example	Response
R <cr>	209.6 <cr> *OK <cr>

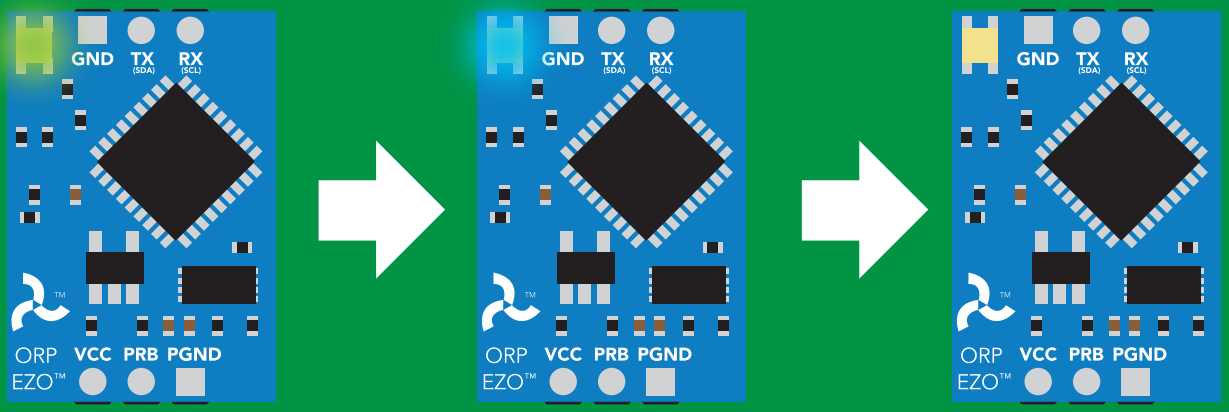

Green
Standby

Cyan
Taking reading

Transmitting

800 ms

Copyright © Atlas Scientific LLC

Atlas Scientific™ Environmental Robotics
r 0.1

Calibration

Command syntax


The EZO™ ORP circuit can be calibrated to any known ORP value

Cal,n <cr> calibrates the ORP circuit to a set value

Cal,clear <cr> delete calibration data

Cal,? <cr> device calibrated?

Example	Response
Cal,225 <cr>	*OK <cr>
Cal,clear <cr>	*OK <cr>
Cal,? <cr>	?Cal,0 <cr> or ?Cal,1 <cr> *OK <cr>

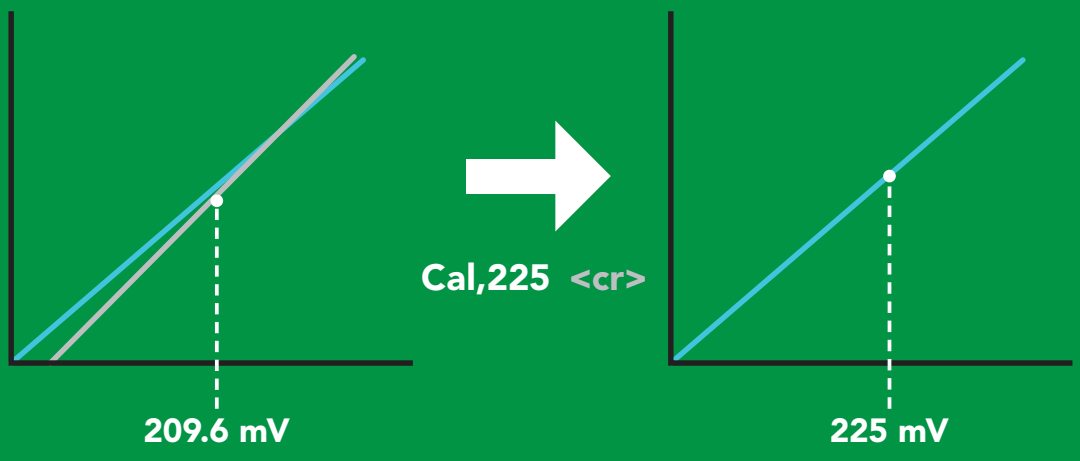

Copyright © Atlas Scientific LLC

Atlas Scientific™ Environmental Robotics

Export calibration

Command syntax

Export: Use this command to download calibration settings

Export,?	<cr>	calibration string info
Export	<cr>	export calibration string from calibrated device

Example

Response

Export,? <cr>

10,120 <cr>

Response breakdown

10, 120

↑ # of strings to export

↑ # of bytes to export

Export strings can be up to 12 characters long, and is always followed by <cr>

Export <cr>

Export <cr>

(7 more)

Export <cr>

Export <cr>

59 6F 75 20 61 72 <cr> (1 of 10)


65 20 61 20 63 6F <cr> (2 of 10)

⋮

6F 6C 20 67 75 79 <cr> (10 of 10)

*DONE

Disabling *OK simplifies this process

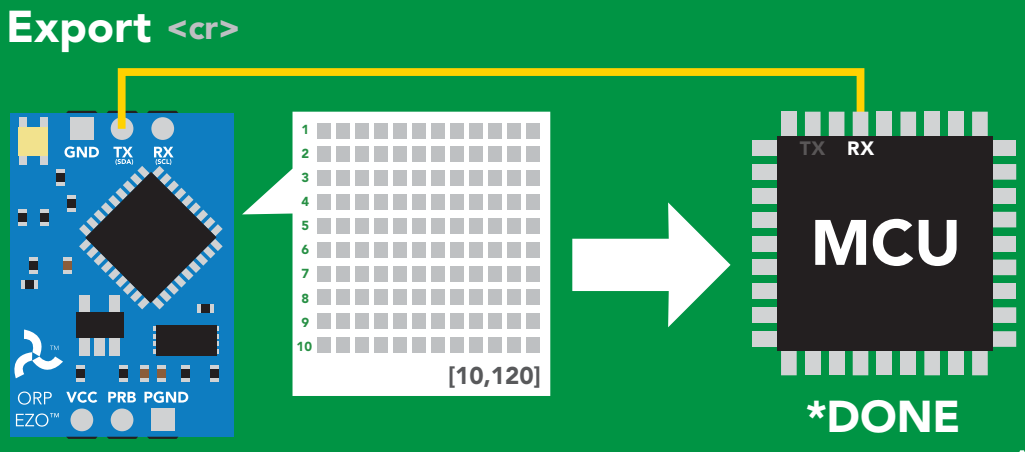

Copyright © Atlas Scientific LLC

Atlas Scientific™ Environmental Robotics

r 0.2

Import calibration

Command syntax

Import: Use this command to upload calibration settings to one or more devices.

Import,n <cr> import calibration string to new device

Example

Import, 59 6F 75 20 61 72 <cr> (1 of 10)

Import, 65 20 61 20 63 6F <cr> (2 of 10)

⋮

Import, 6F 6C 20 67 75 79 <cr> (10 of 10)

Response


*OK <cr>

*OK <cr>

⋮


*OK <cr>

Import,n <cr>

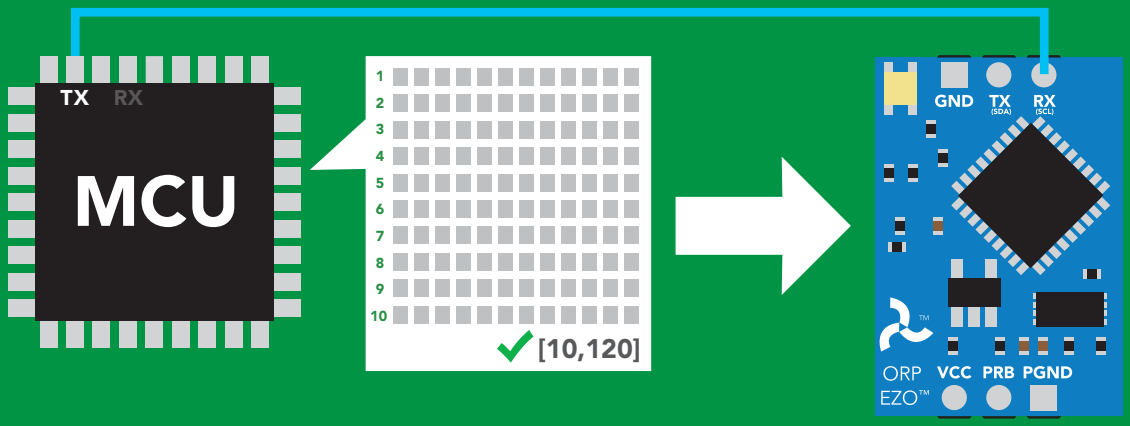

*OK <cr>

system will reboot

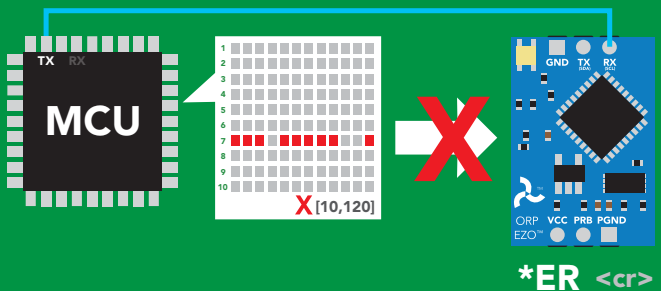

*ER <cr>

*** If one of the imported strings is not correctly entered, the device will not accept the import, respond with *ER and reboot.**

Copyright © Atlas Scientific LLC

Atlas Scientific™ Environmental Robotics

r 0.2

Naming device

Command syntax

Do not use spaces in the name

Name,n	<cr>	set name
Name,	<cr>	clears name
Name,?	<cr>	show name


n =

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16

Up to 16 ASCII characters


Example		Response	
Name,	<cr>	*OK <cr>	name has been cleared
Name,zzt	<cr>	*OK <cr>	
Name,?	<cr>	?Name,zzt <cr> *OK <cr>	

Name,zzt

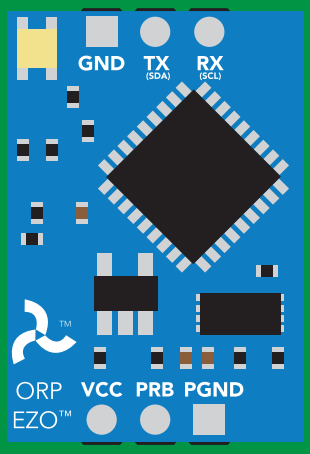

*OK <cr>

Name,?

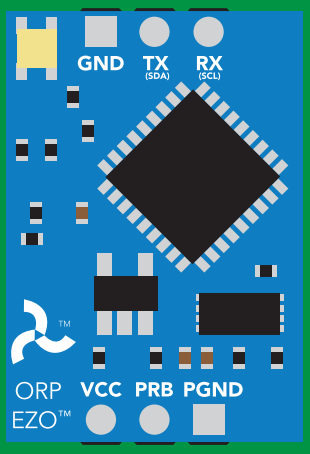

?Name,zzt <cr>
*OK <cr>

Copyright © Atlas Scientific LLC

AtlasScientific™
Environmental Robotics
r 0.2

Device information

Command syntax

i <cr> **device information**

Example	Response
i <cr>	**?i,ORP,1.97** <cr> ***OK** <cr>

Response breakdown

?i,	ORP,	1.97
	↑ Device	↑ Firmware

Copyright © Atlas Scientific LLC

Response codes

Command syntax

*OK,1 <cr> enable response **default**
*OK,0 <cr> disable response
*OK,? <cr> response on/off?

Example	Response
R <cr>	209.6 <cr> *OK <cr>
*OK,0 <cr>	no response, *OK disabled
R <cr>	209.6 <cr> *OK disabled
*OK,? <cr>	?*OK,1 <cr> or ?*OK,0 <cr>

Other response codes

*ER	unknown command
*OV	over volt (VCC>=5.5V)
*UV	under volt (VCC<=3.1V)
*RS	reset
*RE	boot up complete, ready
*SL	entering sleep mode
*WA	wake up

These response codes cannot be disabled

Copyright © Atlas Scientific LLC

Reading device status

Command syntax

Status <cr> **voltage at Vcc pin and reason for last restart**

Example	Response
Status <cr>	**?Status,P,5.038** <cr> ***OK** <cr>

Response breakdown

?Status, P, 5.038

- **P** — Reason for restart
- **5.038** — Voltage at Vcc

Restart codes

P	powered off
S	software reset
B	brown out
W	watchdog
U	unknown

Copyright © Atlas Scientific LLC

Sleep mode/low power

Command syntax

Send any character or command to awaken device.

Sleep <cr> enter sleep mode/low power

Example	Response
Sleep <cr>	*OK <cr> *SL <cr>
Any command	*WA <cr> wakes up device

	STANDBY	SLEEP
5V	16 mA	1.16 mA
3.3V	13.9 mA	0.995 mA



Standby
16 mA

Sleep
1.16 mA

Copyright © Atlas Scientific LLC

Atlas Scientific™ Environmental Robotics

r 0.1


Change baud rate

Command syntax

Baud,n <cr> change baud rate

Example	Response
Baud,38400 <cr>	*OK <cr>
Baud,? <cr>	?Baud,38400 <cr> *OK <cr>

n =
- 300
- 1200
- 2400
- **9600 default**
- 19200
- 38400
- 57600
- 115200

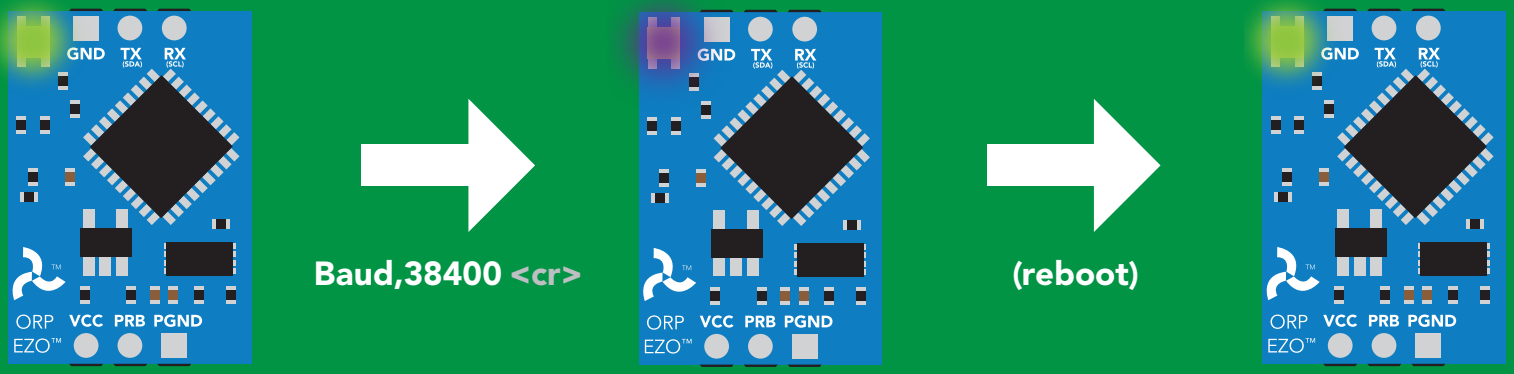

Standby

Changing baud rate

*OK <cr>

Standby

Copyright © Atlas Scientific LLC

Atlas Scientific™ Environmental Robotics

r 0.1

Protocol lock

Command syntax

Locks device to UART mode.


Plock,1 <cr> enable Plock

Plock,0 <cr> disable Plock **default**

Plock,? <cr> Plock on/off?


Example	Response
Plock,1 <cr>	*OK <cr>
Plock,0 <cr>	*OK <cr>
Plock,? <cr>	?Plock,1 <cr> or ?Plock,0 <cr>

Plock,1

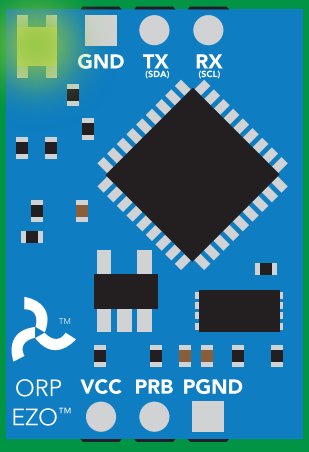

*OK <cr>


I2C,100

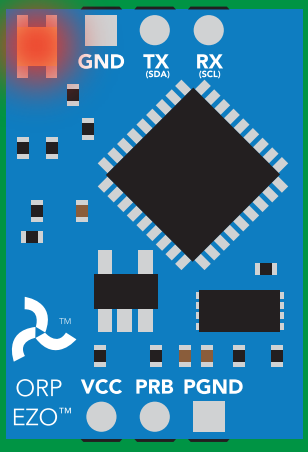

cannot change to I²C

*ER <cr>

Short

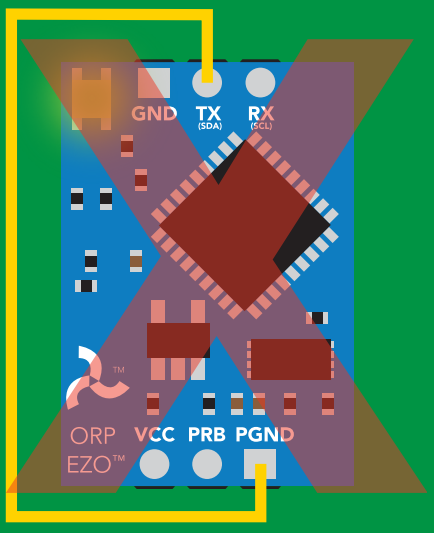

cannot change to I²C

Copyright © Atlas Scientific LLC

AtlasScientific™ Environmental Robotics

r 0.1

Factory reset


Command syntax

Clears calibration LED on "*OK" enabled

Factory <cr> enable factory reset

Example	Response
Factory <cr>	***OK** <cr>

Factory <cr>

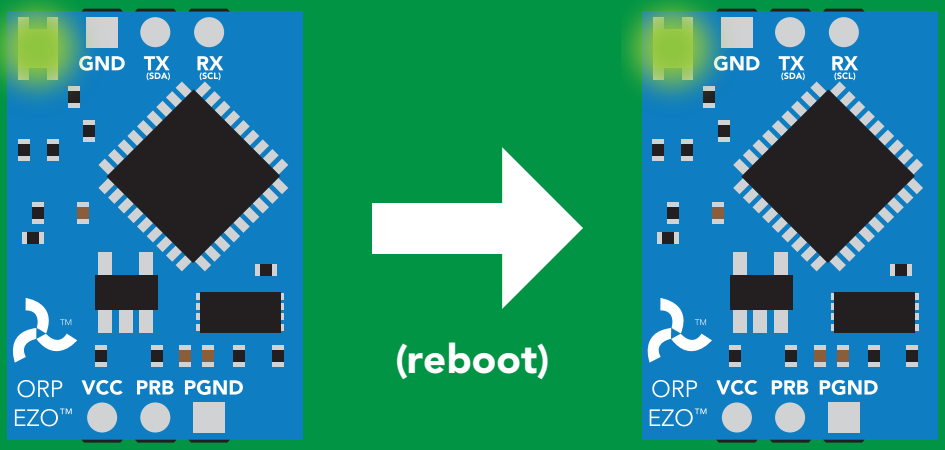

***OK** <cr>

***RS** <cr>
***RE** <cr>

Baud rate will not change

Copyright © Atlas Scientific LLC

Change to I²C mode

Command syntax

Default I²C address 98 (0x62)


I2C,n <cr> sets I²C address and reboots into I²C mode

n = any number 1 – 127

Example	Response
I2C,100 <cr>	*OK (reboot in I²C mode)

Wrong example	Response
I2C,139 <cr> n ≯ 127	*ER <cr>

I2C,100

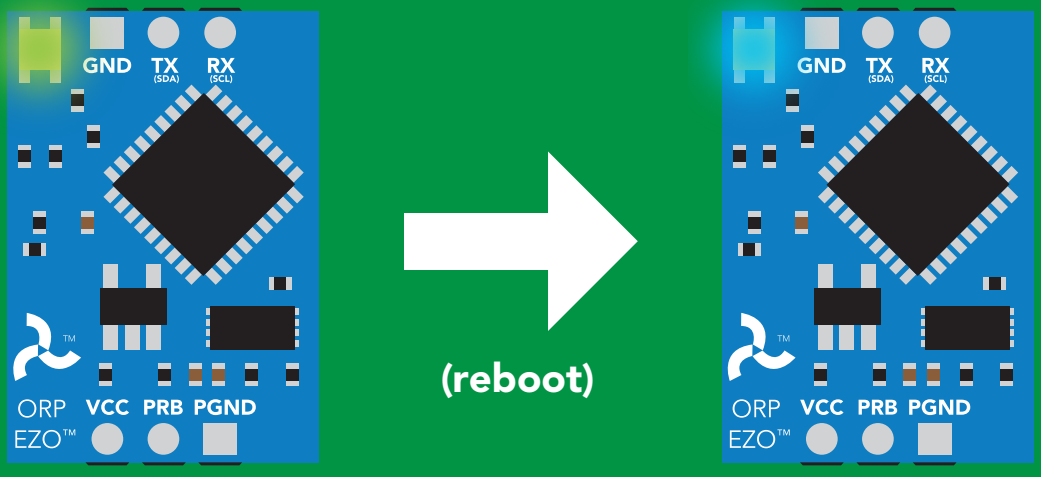

Green
*OK <cr>

Blue
now in I²C mode

Copyright © Atlas Scientific LLC


Atlas Scientific™ Environmental Robotics
r 0.2

Manual switching to I²C


- Disconnect ground (power off)
- Disconnect TX and RX
- Connect TX to PGND
- Confirm RX is disconnected
- Connect ground (power on)
- Wait for LED to change from Green to Blue
- Disconnect ground (power off)
- Reconnect all data and power

Manually switching to I²C will set the I²C address to 98 (0x62)

Example

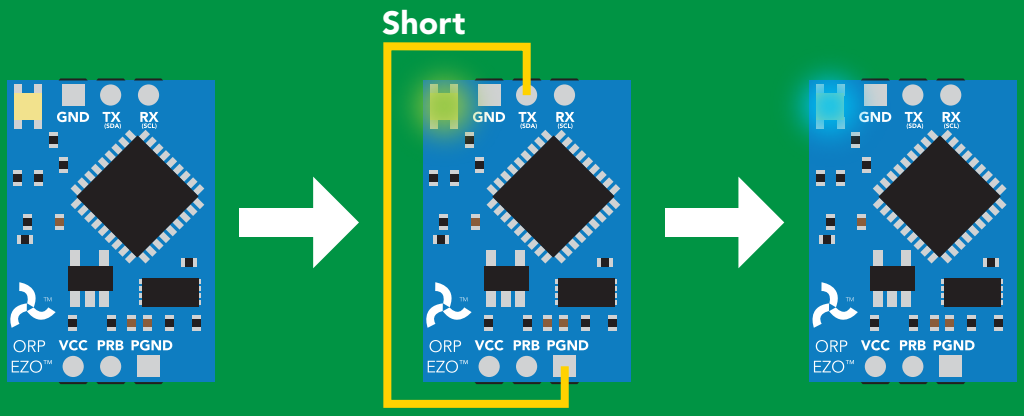

Wrong Example

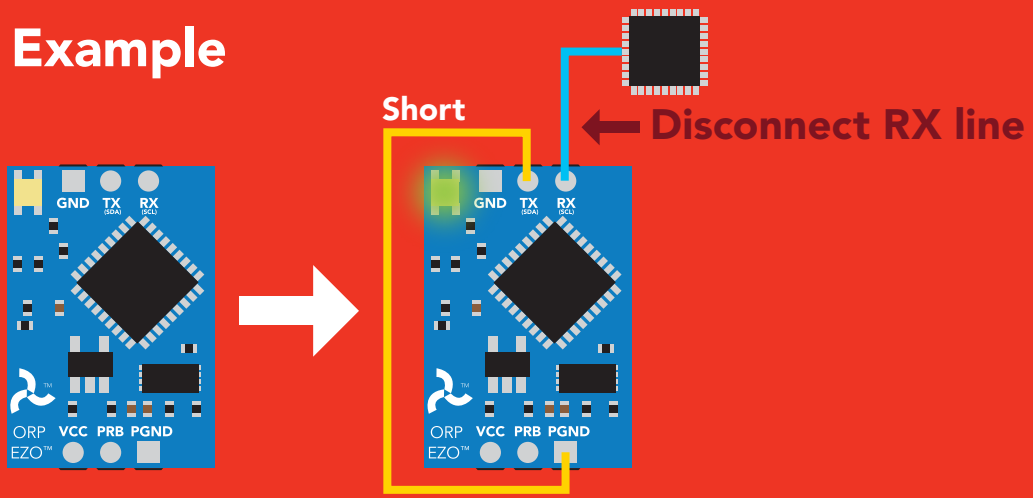

Copyright © Atlas Scientific LLC

I²C mode

The I²C protocol is *considerably more complex* than the UART (RS–232) protocol. Atlas Scientific assumes the embedded systems engineer understands this protocol.

To set your EZO™ device into I²C mode click here

Settings that are retained if power is cut

Calibration
Change I²C address
Hardware switch to UART mode
LED control
Protocol lock
Software switch to UART mode

Settings that are *NOT* retained if power is cut

Find
Sleep mode

Atlas Scientific™
Environmental Robotics

I²C mode

I²C address (0x01 – 0x7F)
98 (0x62) default

Vcc 3.3V – 5.5V

Clock speed 100 – 400 kHz


SDA



SCL





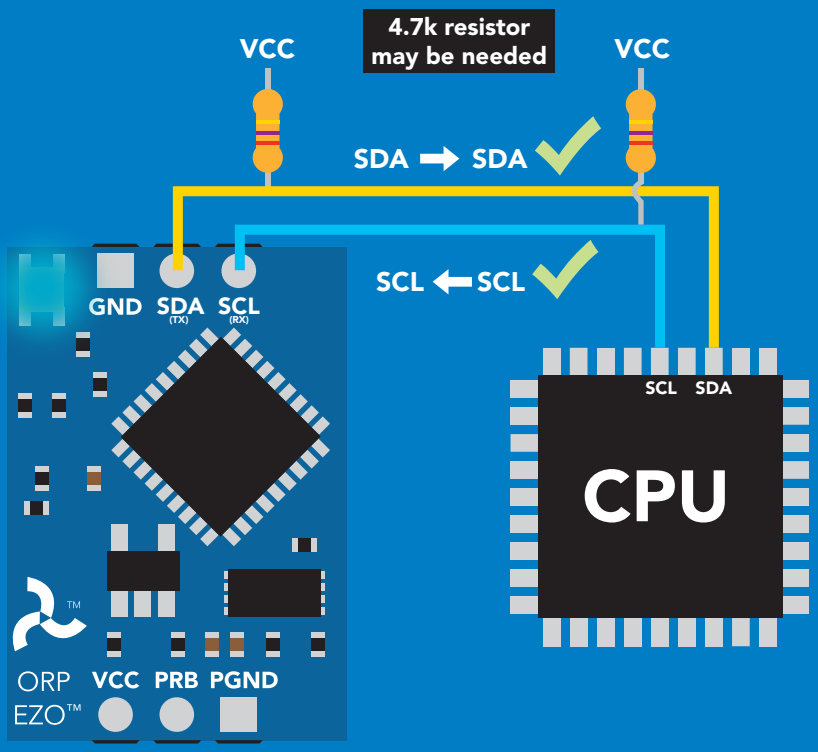

Data format

Reading	**ORP**	**Data type**	**floating point**
Units	**mV**	**Decimal places**	**1**
Encoding	**ASCII**	**Smallest string**	**2 characters**
Format	**string**	**Largest string**	**40 characters**

Copyright © Atlas Scientific LLC


Sending commands to device

5 parts


Start | I²C address (98 (0x62)) | Write | Command (not case sensitive) (ASCII command string) | Stop

Example

Start | 98 (0x62) (I²C address) | Write | Sleep (Command) | Stop

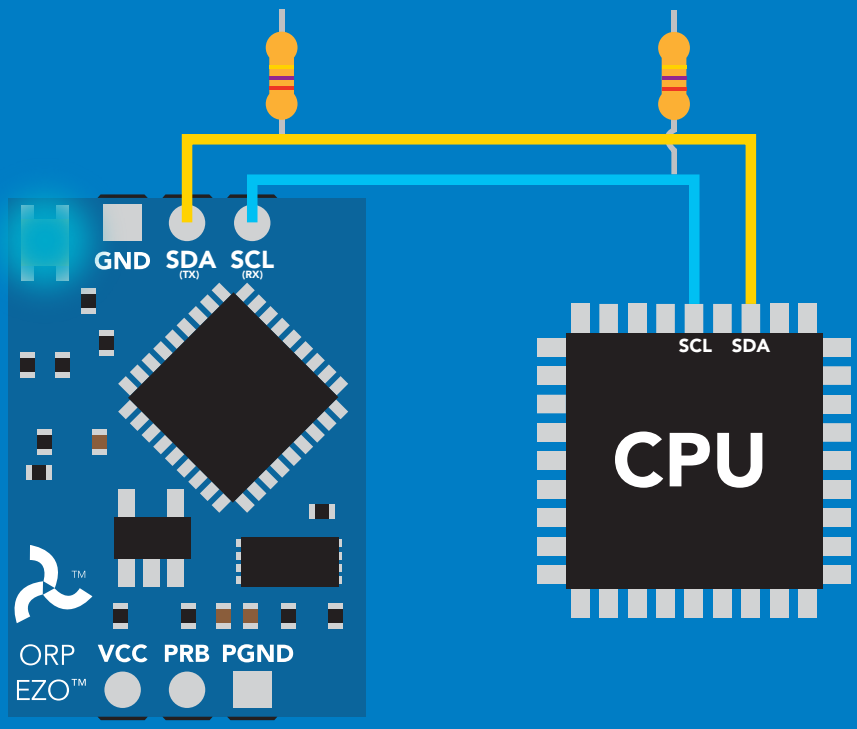

Advanced

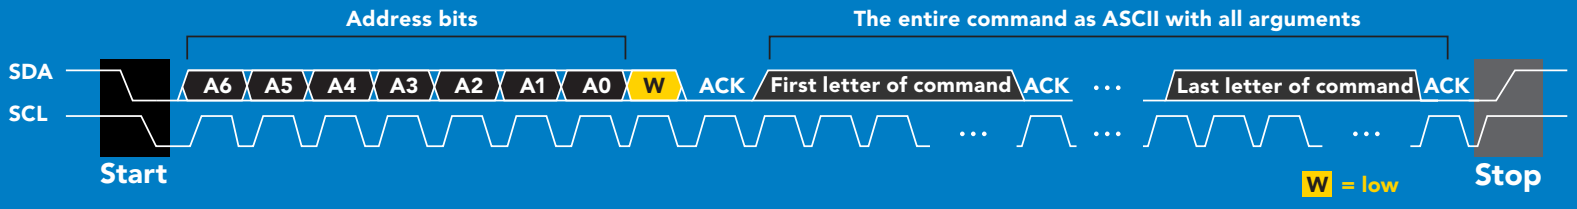



Copyright © Atlas Scientific LLC

Atlas Scientific™ Environmental Robotics


r 0.1


Requesting data from device

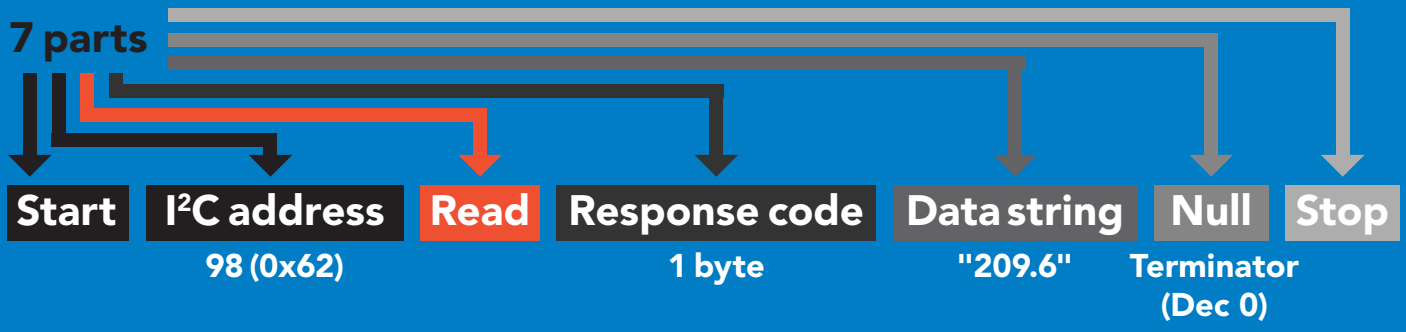

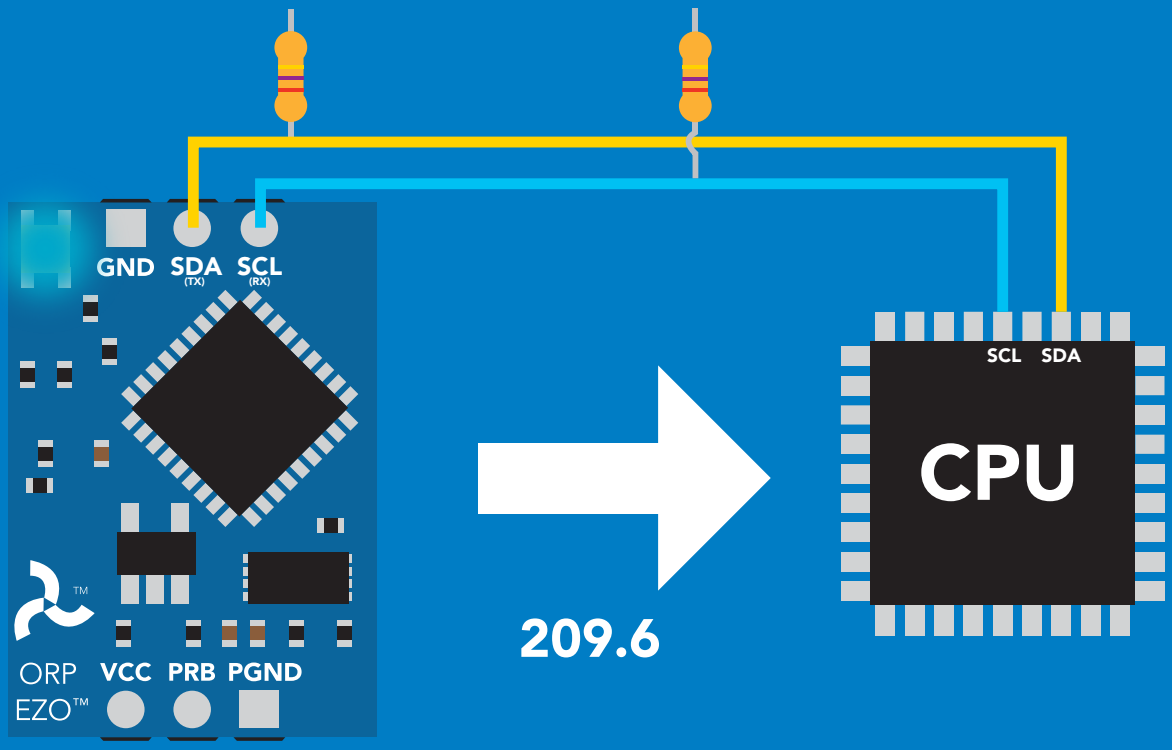

Advanced

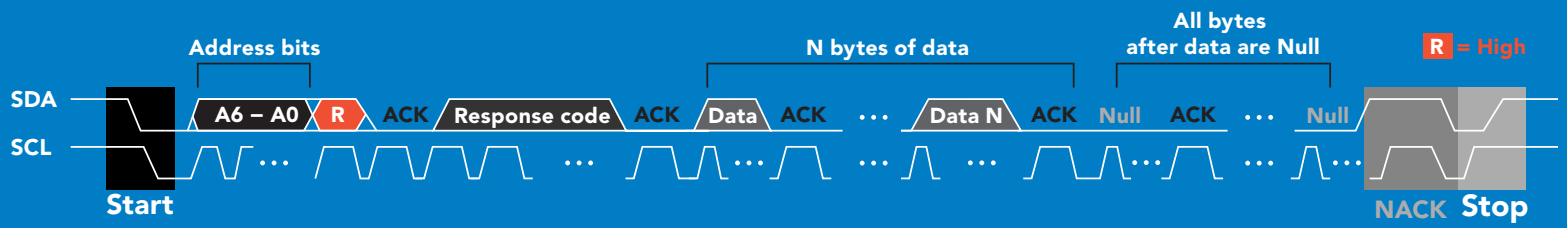

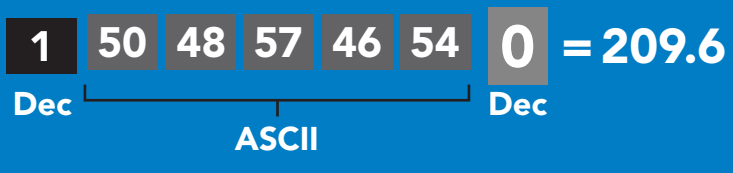


Copyright © Atlas Scientific LLC

Atlas Scientific™
Environmental Robotics
r 0.1

Response codes

After a command has been issued, a 1 byte response code can be read in order to confirm that the command was processed successfully.

Reading back the response code is completely optional, and is not required for normal operation.

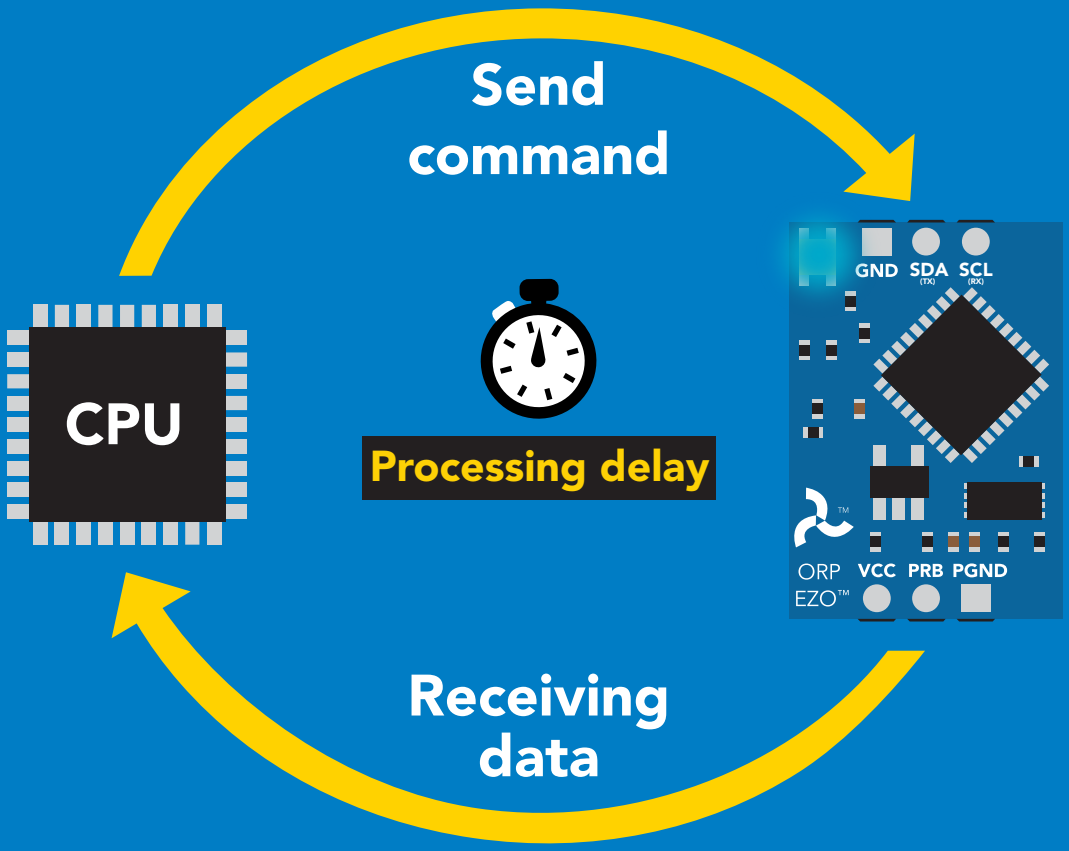

Example

```
I2C_start;
I2C_address;
I2C_write(EZO_command);
I2C_stop;

delay(300);        Processing delay

I2C_start;
I2C_address;
Char[ ] = I2C_read;
I2C_stop;
```

If there is no processing delay or the processing delay is too short, the response code will always be 254.

Response codes

Single byte, not string


255	no data to send
254	still processing, not ready
2	syntax error
1	successful request

Copyright © Atlas Scientific LLC

AtlasScientific™ Environmental Robotics


r 0.2

LED color definition

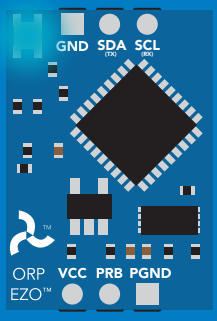


Blue

I²C standby

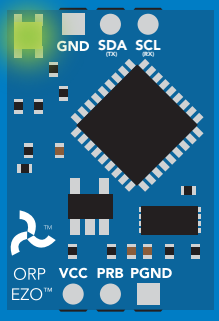


Green

Taking reading

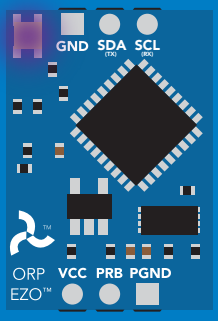


Purple

Changing I²C address

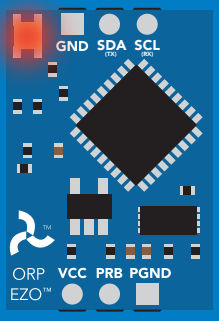

Red

Command not understood

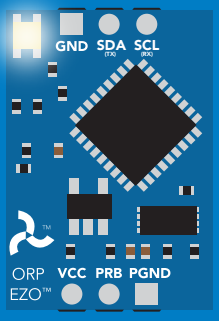

White

Find

	LED ON
5V	**+2.2 mA**
3.3V	**+0.6 mA**

Copyright © Atlas Scientific LLC

Atlas Scientific™ Environmental Robotics

r 0.1

I²C mode
command quick reference

All commands are ASCII strings or single ASCII characters.

Command	Function	
Baud	switch back to UART mode	pg. 59
Cal	performs calibration	pg. 49
Export	export calibration	pg. 50
Factory	enable factory reset	pg. 58
Find	finds device with blinking white LED	pg. 47
i	device information	pg. 53
I2C	change I²C address	pg. 57
Import	import calibration	pg. 51
L	enable/disable LED	pg. 46
Name	set/show name of device	pg. 52
Plock	enable/disable protocol lock	pg. 56
R	returns a single reading	pg. 48
Sleep	enter sleep mode/low power	pg. 55
Status	retrieve status information	pg. 54

Copyright © Atlas Scientific LLC


LED control

Command syntax


300ms processing delay

L,1	LED on	default
L,0	LED off	
L,?	LED state on/off?	

Example	Response
L,1	Wait 300ms → 1 (Dec) 0 (Null)
L,0	Wait 300ms → 1 (Dec) 0 (Null)
L,?	Wait 300ms → 1 (Dec) ?L,1 (ASCII) 0 (Null) or 1 (Dec) ?L,0 (ASCII) 0 (Null)

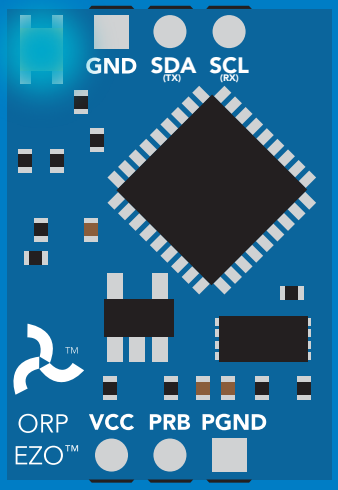

L,1

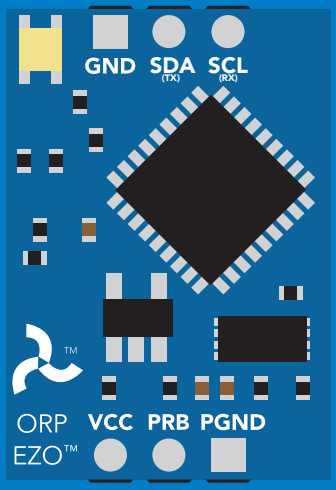

L,0

Copyright © Atlas Scientific LLC

Atlas Scientific™ Environmental Robotics

r 0.1

Find


300ms processing delay

Command syntax

This command will disable continuous mode
Send any character or command to terminate find.

Find LED rapidly blinks white, used to help find device

Example	Response
Find	Wait 300ms 1 Dec 0 Null

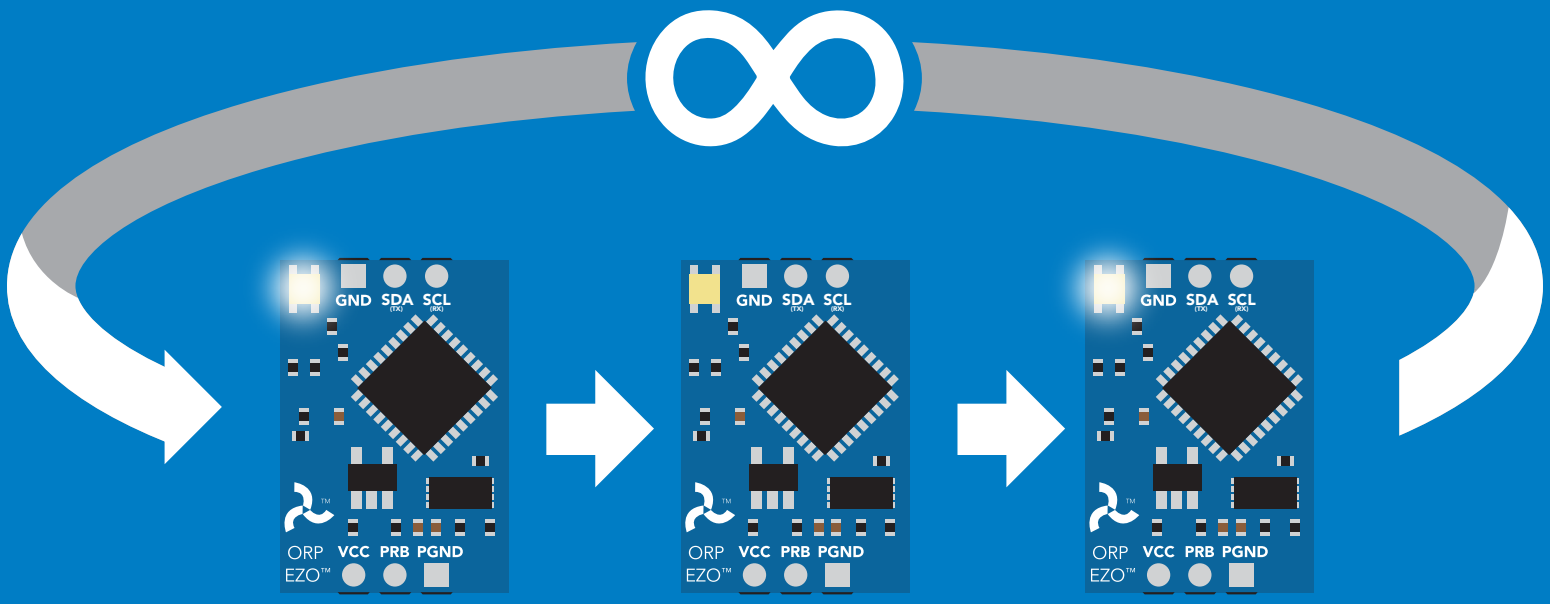

Copyright © Atlas Scientific LLC

Atlas Scientific™ Environmental Robotics

r 0.1


Taking reading

Command syntax

900ms processing delay

R return 1 reading

Example	Response
R	Wait 900ms 1 Dec 209.6 ASCII 0 Null

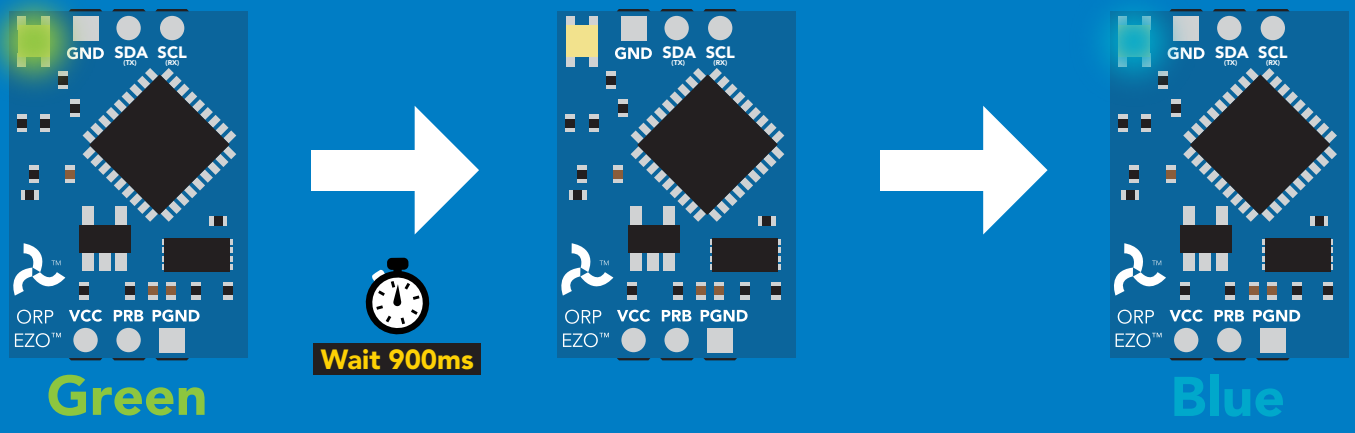

Copyright © Atlas Scientific LLC

Calibration


Command syntax

900ms processing delay

Cal,n	calibrates the ORP circuit to a set value
Cal,clear	delete calibration data
Cal,?	device calibrated?

The EZO™ ORP circuit can be calibrated to any known ORP value

Example	Response
Cal,225	Wait 900ms — 1 (Dec) 0 (Null)
Cal,clear	Wait 300ms — 1 (Dec) 0 (Null)
Cal,?	Wait 300ms — 1 (Dec) ?Cal,0 (ASCII) 0 (Null) or 1 (Dec) ?Cal,1 (ASCII) 0 (Null)

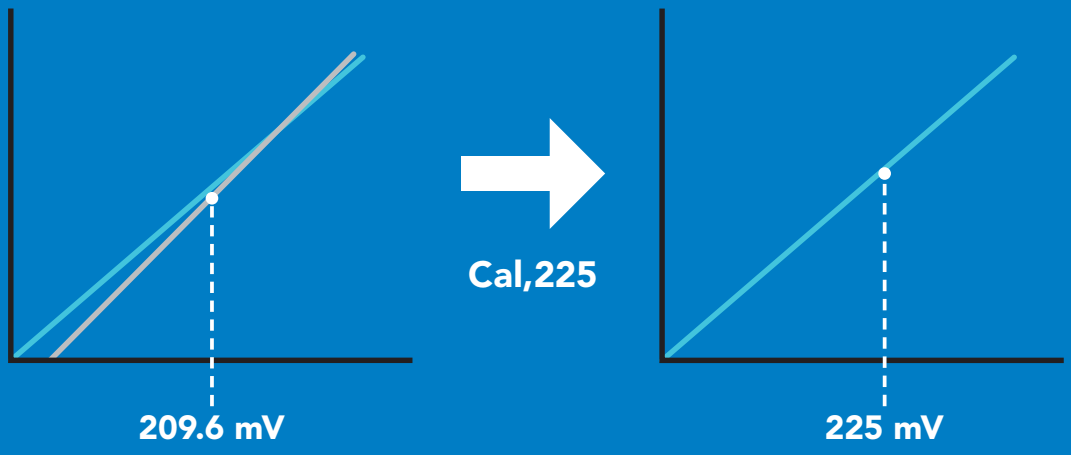

Copyright © Atlas Scientific LLC

AtlasScientific™ Environmental Robotics

Export calibration

300ms processing delay

Command syntax

Export: Use this command to download calibration settings

Export,?	calibration string info
Export	export calibration string from calibrated device

Example

(optional) Export,?

Wait 300ms

1	10,120	0
Dec	ASCII	Null

Response breakdown

10, 120

# of strings to export — # of bytes to export

Export strings can be up to 12 characters long

Export

Wait 300ms

1	59 6F 75 20 61 72	0
Dec	ASCII	Null

(1 of 10)

Export

Wait 300ms

1	65 20 61 20 63 6F	0
Dec	ASCII	Null

(2 of 10)

(7 more)

⋮

Export

Wait 300ms

1	6F 6C 20 67 75 79	0
Dec	ASCII	Null

(10 of 10)

Export

Wait 300ms

1	*DONE	0
Dec	ASCII	Null

Copyright © Atlas Scientific LLC

AtlasScientific™ Environmental Robotics

r 0.2

Import calibration

300ms processing delay

Command syntax

Import: Use this command to upload calibration settings to one or more devices.

Import,n import calibration string to new device

Example

Import, 59 6F 75 20 61 72 (1 of 10)

Import, 65 20 61 20 63 6F (2 of 10)

⋮

Import, 6F 6C 20 67 75 79 (10 of 10)

Response


Wait 300ms | 1 Dec | 0 Null

Wait 300ms | 1 Dec | 0 Null

⋮


Wait 300ms | 1 Dec | 0 Null

Import,n

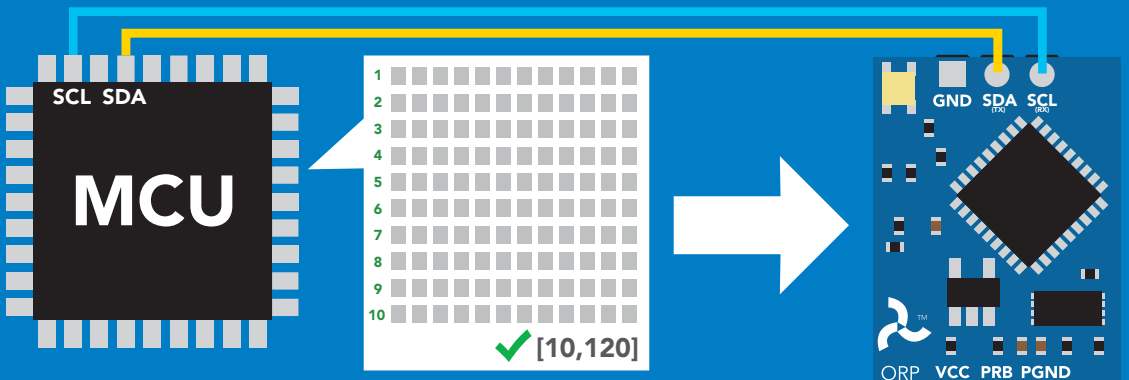

1 Dec | *Pending ASCII | 0 Null

system will reboot

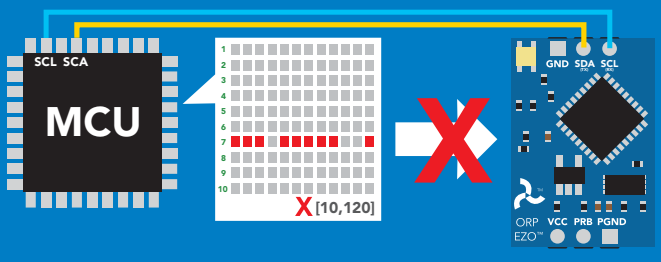

reboot

*** If one of the imported strings is not correctly entered, the device will not accept the import and reboot.**

Copyright © Atlas Scientific LLC

Atlas Scientific™ Environmental Robotics

r 0.2

Naming device

300ms processing delay

Command syntax

Do not use spaces in the name

Name,n	set name
Name,	clears name
Name,?	show name


n = _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

Up to 16 ASCII characters


Example	Response
Name,	Wait 300ms — 1 Dec — 0 Null — name has been cleared
Name,zzt	Wait 300ms — 1 Dec — 0 Null
Name,?	Wait 300ms — 1 Dec — ?Name,zzt ASCII — 0 Null

Name,zzt

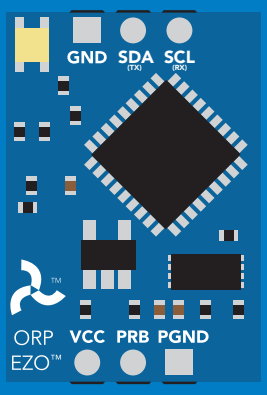

1 0

Name,?

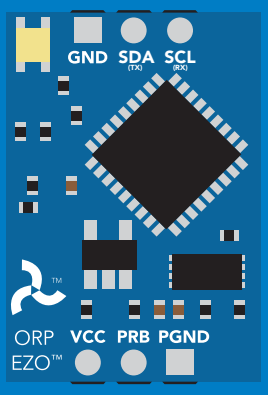

1 ?Name,zzt 0

Copyright © Atlas Scientific LLC

Atlas Scientific™ Environmental Robotics

r 0.1

Device information

Command syntax

300ms processing delay

i device information

Example

i

Response



1 Dec

?i,ORP, 19.7 ASCII

0 Null

Response breakdown

?i, ORP, 1.97

ORP, ↑ Device

1.97 ↑ Firmware

Copyright © Atlas Scientific LLC

Reading device status

Command syntax

300ms processing delay

Status voltage at Vcc pin and reason for last restart

Example

Status

Response



1	?Status,P,5.038	0
Dec	ASCII	Null

Response breakdown

?Status,	P,	5.038
	↑ Reason for restart	↑ Voltage at Vcc

Restart codes

P	powered off
S	software reset
B	brown out
W	watchdog
U	unknown

Copyright © Atlas Scientific LLC

Sleep mode/low power

Command syntax

Sleep	enter sleep mode/low power

Send any character or command to awaken device.

Example	Response
Sleep	no response
Any command	wakes up device

Do not read status byte after issuing sleep command.

	STANDBY	SLEEP
5V	16 mA	1.16 mA
3.3V	13.9 mA	0.995 mA



Standby

Sleep

Copyright © Atlas Scientific LLC

AtlasScientific™
Environmental Robotics
r 0.1

Protocol lock

Command syntax

300ms processing delay

Plock,1 enable Plock


Plock,0 disable Plock **default**

Plock,? Plock on/off?


Locks device to I²C mode.

Example	Response
Plock,1	Wait 300ms → 1 (Dec) 0 (Null)
Plock,0	Wait 300ms → 1 (Dec) 0 (Null)
Plock,?	Wait 300ms → 1 (Dec) ?Plock,1 (ASCII) 0 (Null)


Plock,1

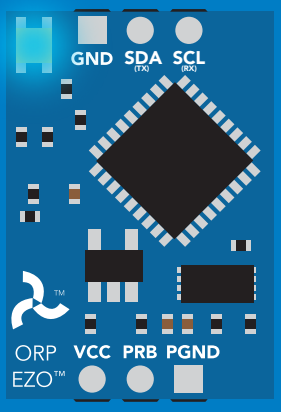

Baud, 9600

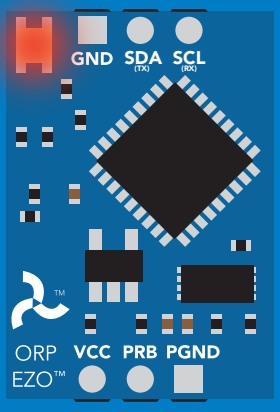

cannot change to UART

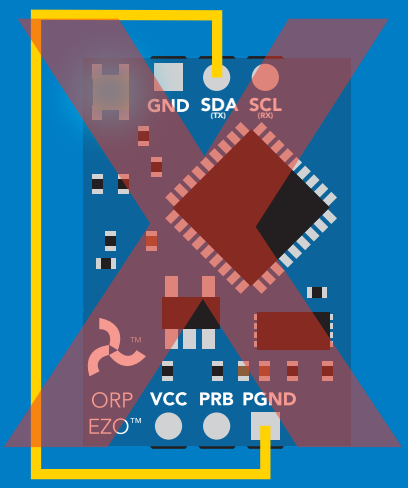

cannot change to UART

Copyright © Atlas Scientific LLC

AtlasScientific™ Environmental Robotics

r 0.1

I²C address change

Command syntax

300ms processing delay

I2C,n sets I²C address and reboots into I²C mode

Example	Response
I2C,100	device reboot (no response given)


n = any number 1 – 127

Warning!

Changing the I²C address will prevent communication between the circuit and the CPU until the CPU is updated with the new I²C address.

Default I²C address is 98 (0x62).

I2C,100

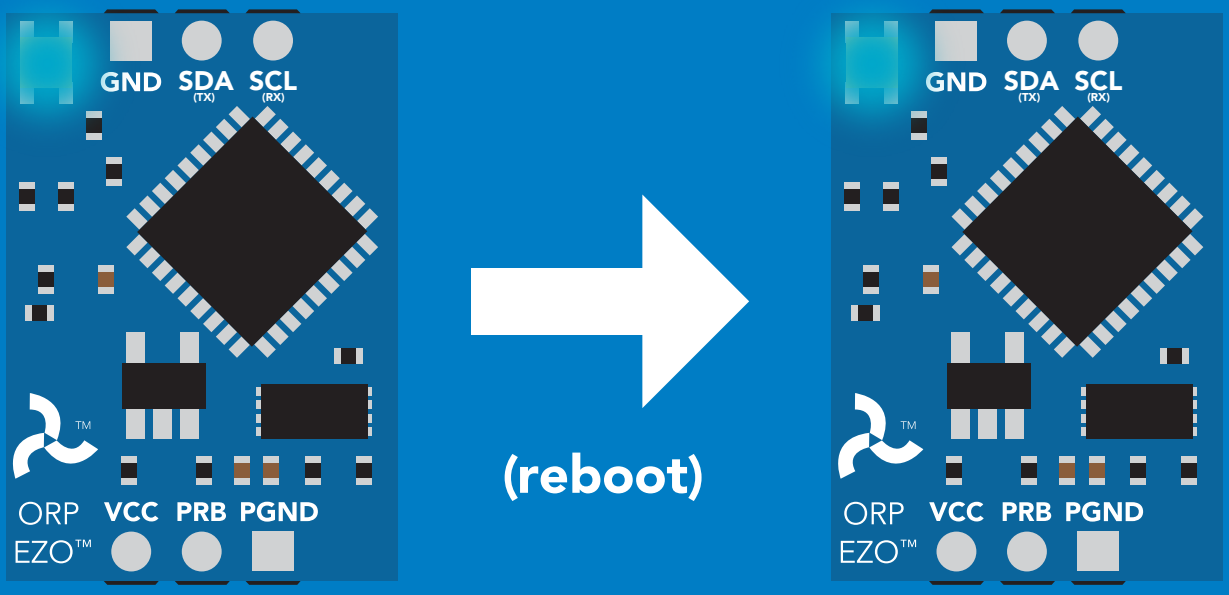

Copyright © Atlas Scientific LLC

AtlasScientific™ Environmental Robotics

r 0.2

Factory reset

Command syntax

Factory reset will not take the device out of I²C mode.


Factory enable factory reset

I²C address will not change

Example	Response
Factory	device reboot (no response given)

Clears calibration
LED on
Response codes enabled

Factory

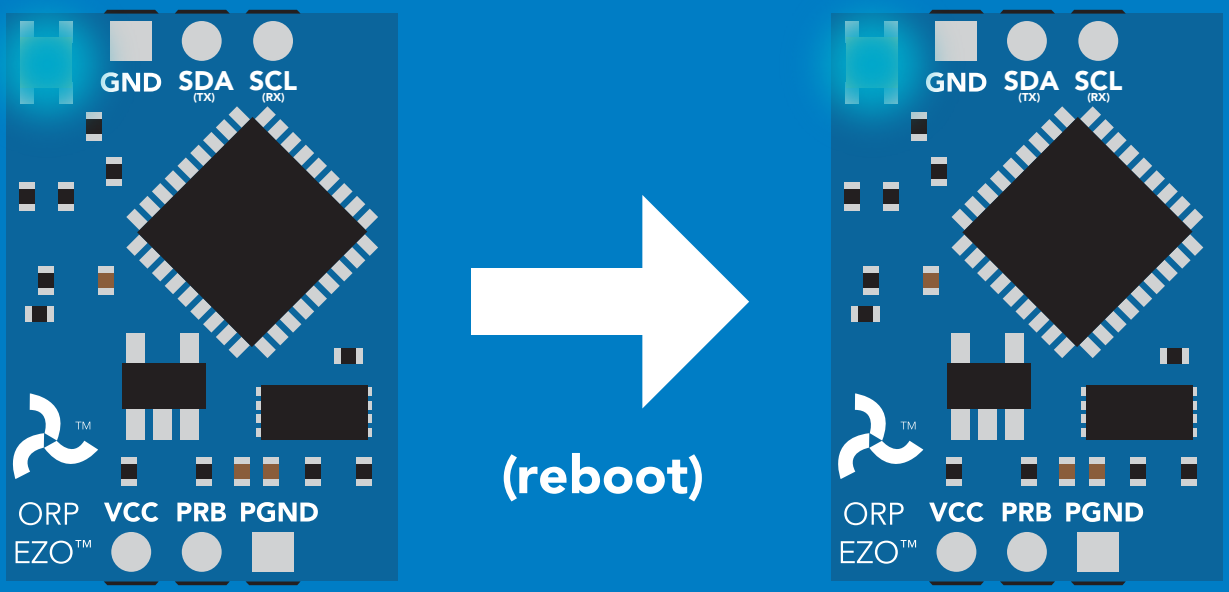

Copyright © Atlas Scientific LLC


Change to UART mode

Command syntax

Baud,n switch from I²C to UART

Example	Response
Baud,9600	reboot in UART mode (no response given)

n = 300, 1200, 2400, 9600, 19200, 38400, 57600, 115200

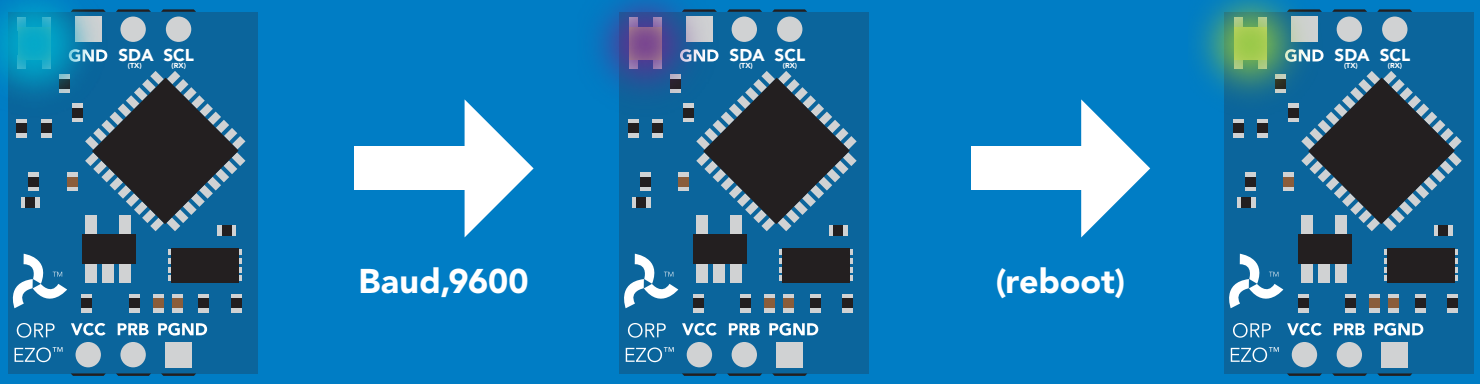

Changing to UART mode

Copyright © Atlas Scientific LLC


Atlas Scientific™ Environmental Robotics

r 0.1


Manual switching to UART

- Disconnect ground (power off)
- Disconnect TX and RX
- Connect TX to PGND
- Confirm RX is disconnected
- Connect ground (power on)
- Wait for LED to change from Blue to Green
- Disconnect ground (power off)
- Reconnect all data and power

Example

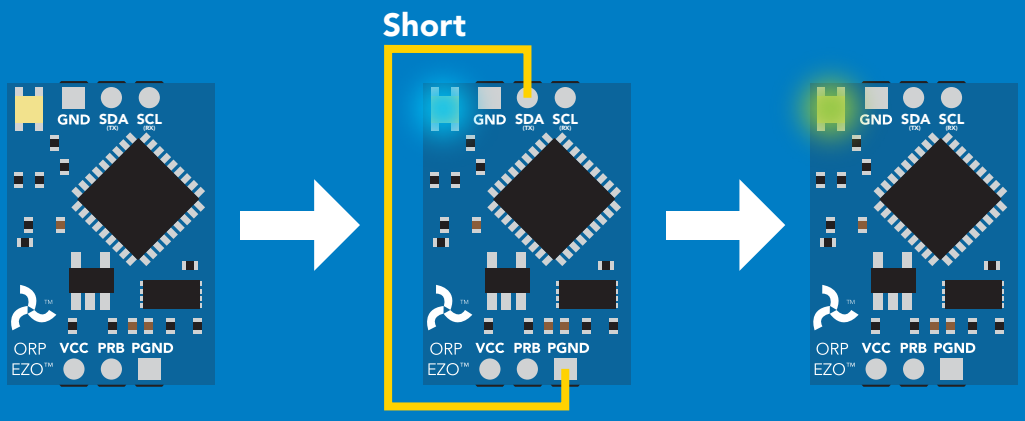


Wrong Example

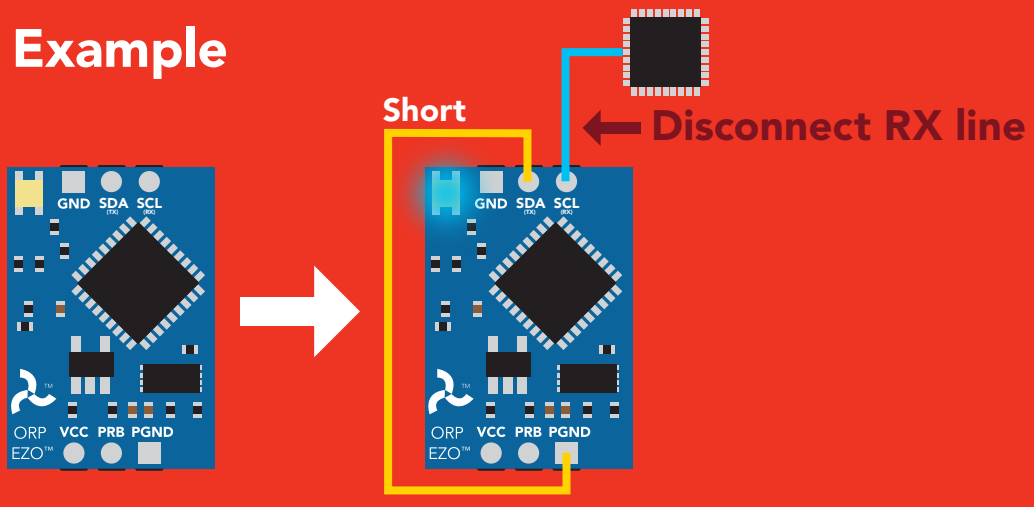


Copyright © Atlas Scientific LLC

AtlasScientific™
Environmental Robotics
r 0.1


EZO™ circuit footprint

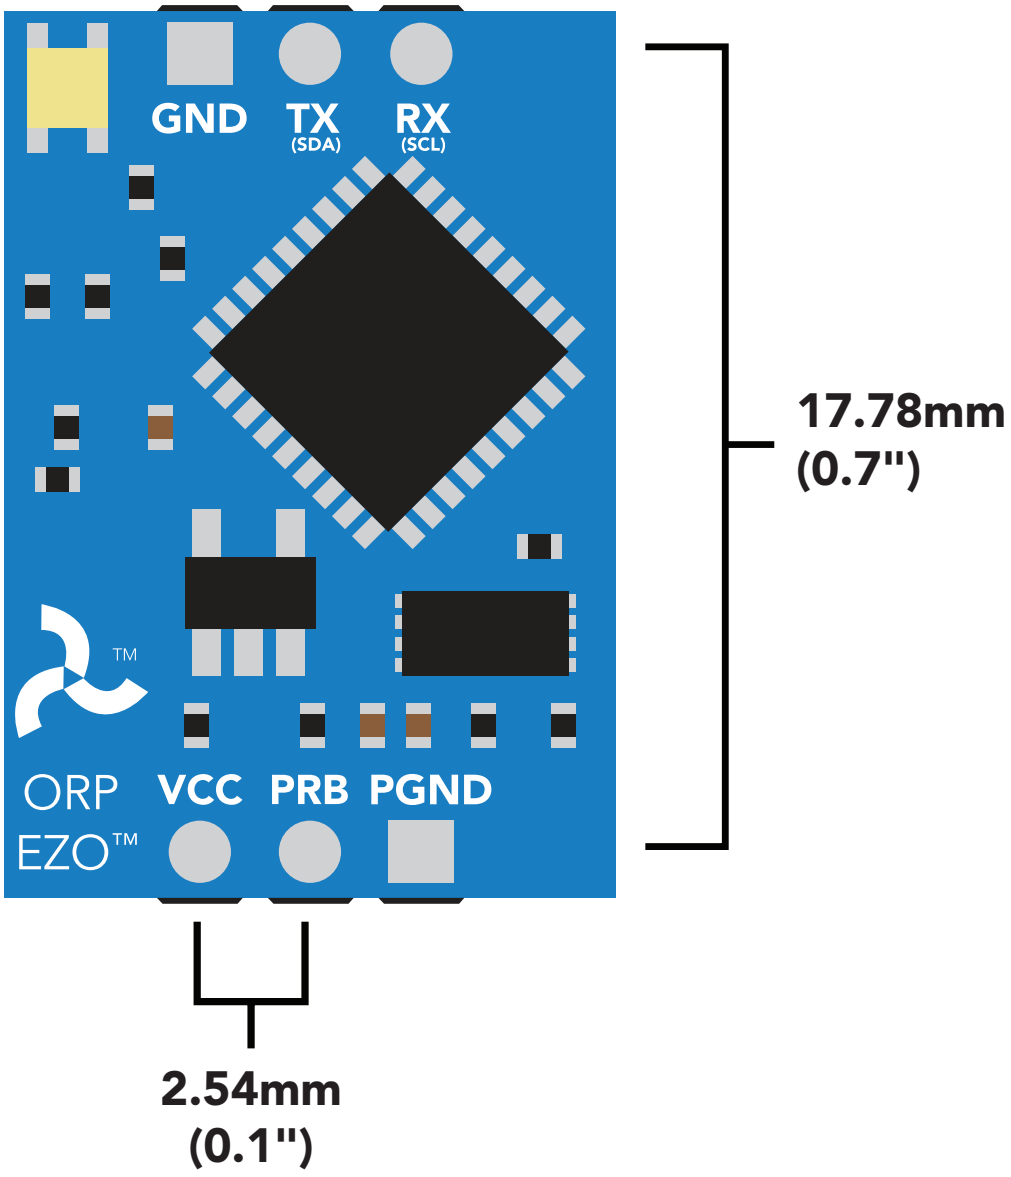


1 In your CAD software place a 8 position header.

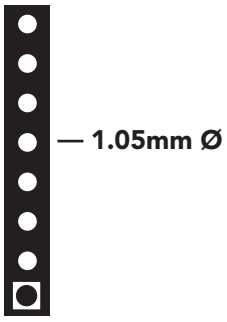

2 Place a 3 position header at both top and bottom of the 8 position.

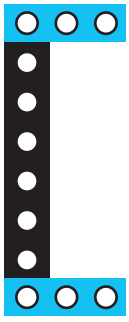

3 Delete the 8 position header. The two 3 position headers are now 17.78mm (0.7") apart from each other.

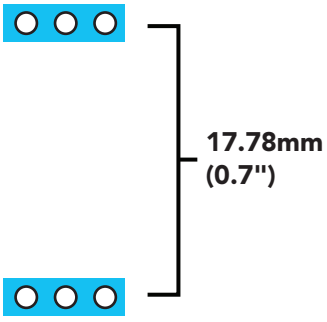

Copyright © Atlas Scientific LLC

AtlasScientific™
Environmental Robotics
r 0.1

Datasheet change log

Datasheet V 5.0

Revised naming device info on pages 29 & 52.

Datasheet V 4.9

Revised single point calibration information and art on pg 13.

Datasheet V 4.8

Moved Default state to pg 14.

Datasheet V 4.7

Updated firmware to V2.11 on pg 63.

Datasheet V 4.6

Revised response for the sleep command in UART mode on pg 33.

Datasheet V 4.5

Revised calibration theory on page 12, and added more information on the Export calibration and Import calibration commands.

Datasheet V 4.4

Revised isolation schematic on pg. 10

Datasheet V 4.3

Changed "Max rate" to "Response time" on cover page.

Datasheet V 4.2

Removed note from certain commands about firmware version.

Datasheet V 4.1

Added information to calibration theory on pg 8.

 Copyright © Atlas Scientific LLC

Datasheet V 4.0

Revised definition of response codes on pg 42.

Datasheet V 3.9

Revised isolation information on pg 9.

Datasheet V 3.8

Revised Plock pages to show default value.

Datasheet V 3.7

Added new commands:
"Find" pages 23 (UART) & 46 (I^2C).
"Export/Import calibration" pages 27 (UART) & 49 (I^2C).
Added new feature to continous mode "C,n" pg 24.

Datasheet V 3.6

Revised circuit illustrations throughout datasheet.

Datasheet V 3.5

Added accuracy range on cover page, and revised isolation info on pg 10.

Datasheet V 3.4

Revised entire datasheet.

 Copyright © Atlas Scientific LLC

Firmware updates

V1.5 – Baud rate change (Nov 6, 2014)
- Change default baud rate to 9600

V1.6 – I²C bug (Dec 1, 2014)
- Fixed I²C bug where the circuit may inappropriately respond when other I²C devices are connected.

V1.7 – Factory (April 14, 2015)
- Changed "X" command to "Factory"

V1.95 – Plock (March 31, 2016)
- Added protocol lock feature "Plock"

V1.96 – EEPROM (April 26, 2016)
- Fixed bug where EEPROM would get erased if the circuit lost power 900ms into startup

V1.97 – EEPROM (Oct 10, 2016)
- Fixed bug in the cal clear command, improves how it calculates the ORP
- Added calibration saving and loading

V2.10 – (May 9, 2017)
- Added "Find" command.
- Added "Export/import" command.
- Modified continuous mode to be able to send readings every "n" seconds.

V2.11 – (July 17, 2017)
- Fixed bug where calibration would restore itself after restart, despite being cleared.

V2.12 – (Oct 18, 2021)
- Internal update for new part compatibility.

V2.13 – (Nov 12, 2021)
- Fixed bug in I2C mode with timing and sleep mode.

 Copyright © Atlas Scientific LLC

Warranty

Atlas Scientific™ Warranties the EZO™ class ORP circuit to be free of defect during the debugging phase of device implementation, or 30 days after receiving the EZO™class ORP circuit (which ever comes first).

The debugging phase

The debugging phase as defined by Atlas Scientific™ is the time period when the EZO™ class ORP circuit is inserted into a bread board, or shield. If the EZO™ class ORP circuit is being debugged in a bread board, the bread board must be devoid of other components. If the EZO™ class ORP circuit is being connected to a microcontroller, the microcontroller must be running code that has been designed to drive the EZO™ class ORP circuit exclusively and output the EZO™ class ORP circuit data as a serial string.

It is important for the embedded systems engineer to keep in mind that the following activities will void the EZO™ class ORP circuit warranty:

- **Soldering any part of the EZO™ class ORP circuit.**
- **Running any code, that does not exclusively drive the EZO™ class ORP circuit and output its data in a serial string.**
- **Embedding the EZO™ class ORP circuit into a custom made device.**
- **Removing any potting compound.**

Copyright © Atlas Scientific LLC

Reasoning behind this warranty

Because Atlas Scientific™ does not sell consumer electronics; once the device has been embedded into a custom made system, Atlas Scientific™ cannot possibly warranty the EZO™ class ORP circuit, against the thousands of possible variables that may cause the EZO™ class ORP circuit to no longer function properly.

Please keep this in mind:

1. **All Atlas Scientific™ devices have been designed to be embedded into a custom made system by you, the embedded systems engineer.**

2. **All Atlas Scientific™ devices have been designed to run indefinitely without failure in the field.**

3. **All Atlas Scientific™ devices can be soldered into place, however you do so at your own risk.**

Atlas Scientific™ is simply stating that once the device is being used in your application, Atlas Scientific™ can no longer take responsibility for the EZO™ class ORP circuits continued operation. This is because that would be equivalent to Atlas Scientific™ taking responsibility over the correct operation of your entire device.

 Copyright © Atlas Scientific LLC